
USA 1-800-888-8458
Europe +31 (0)33-45 45 600


User's Guide


Neo-Flex Slide-out Keyboard Tray Wall Mount

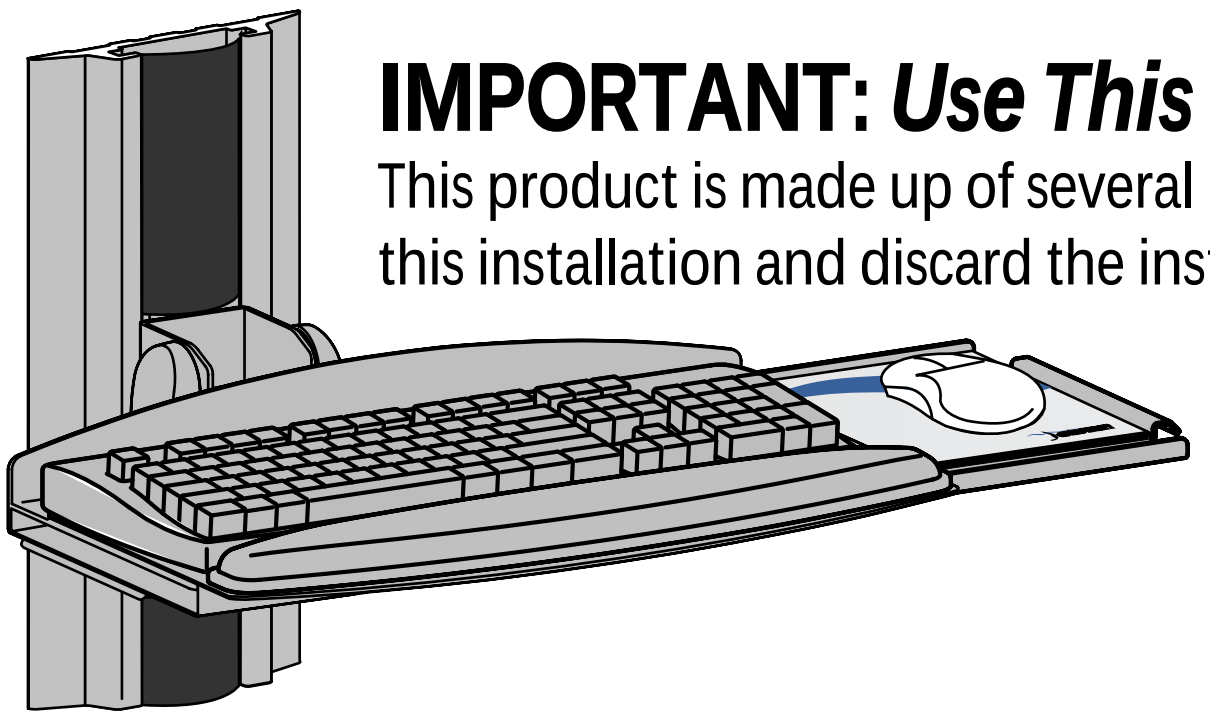


IMPORTANT: *Use This User's Guide!*

This product is made up of several individual products. Use this User's guide for this installation and discard the instructions that come in the individual boxes.

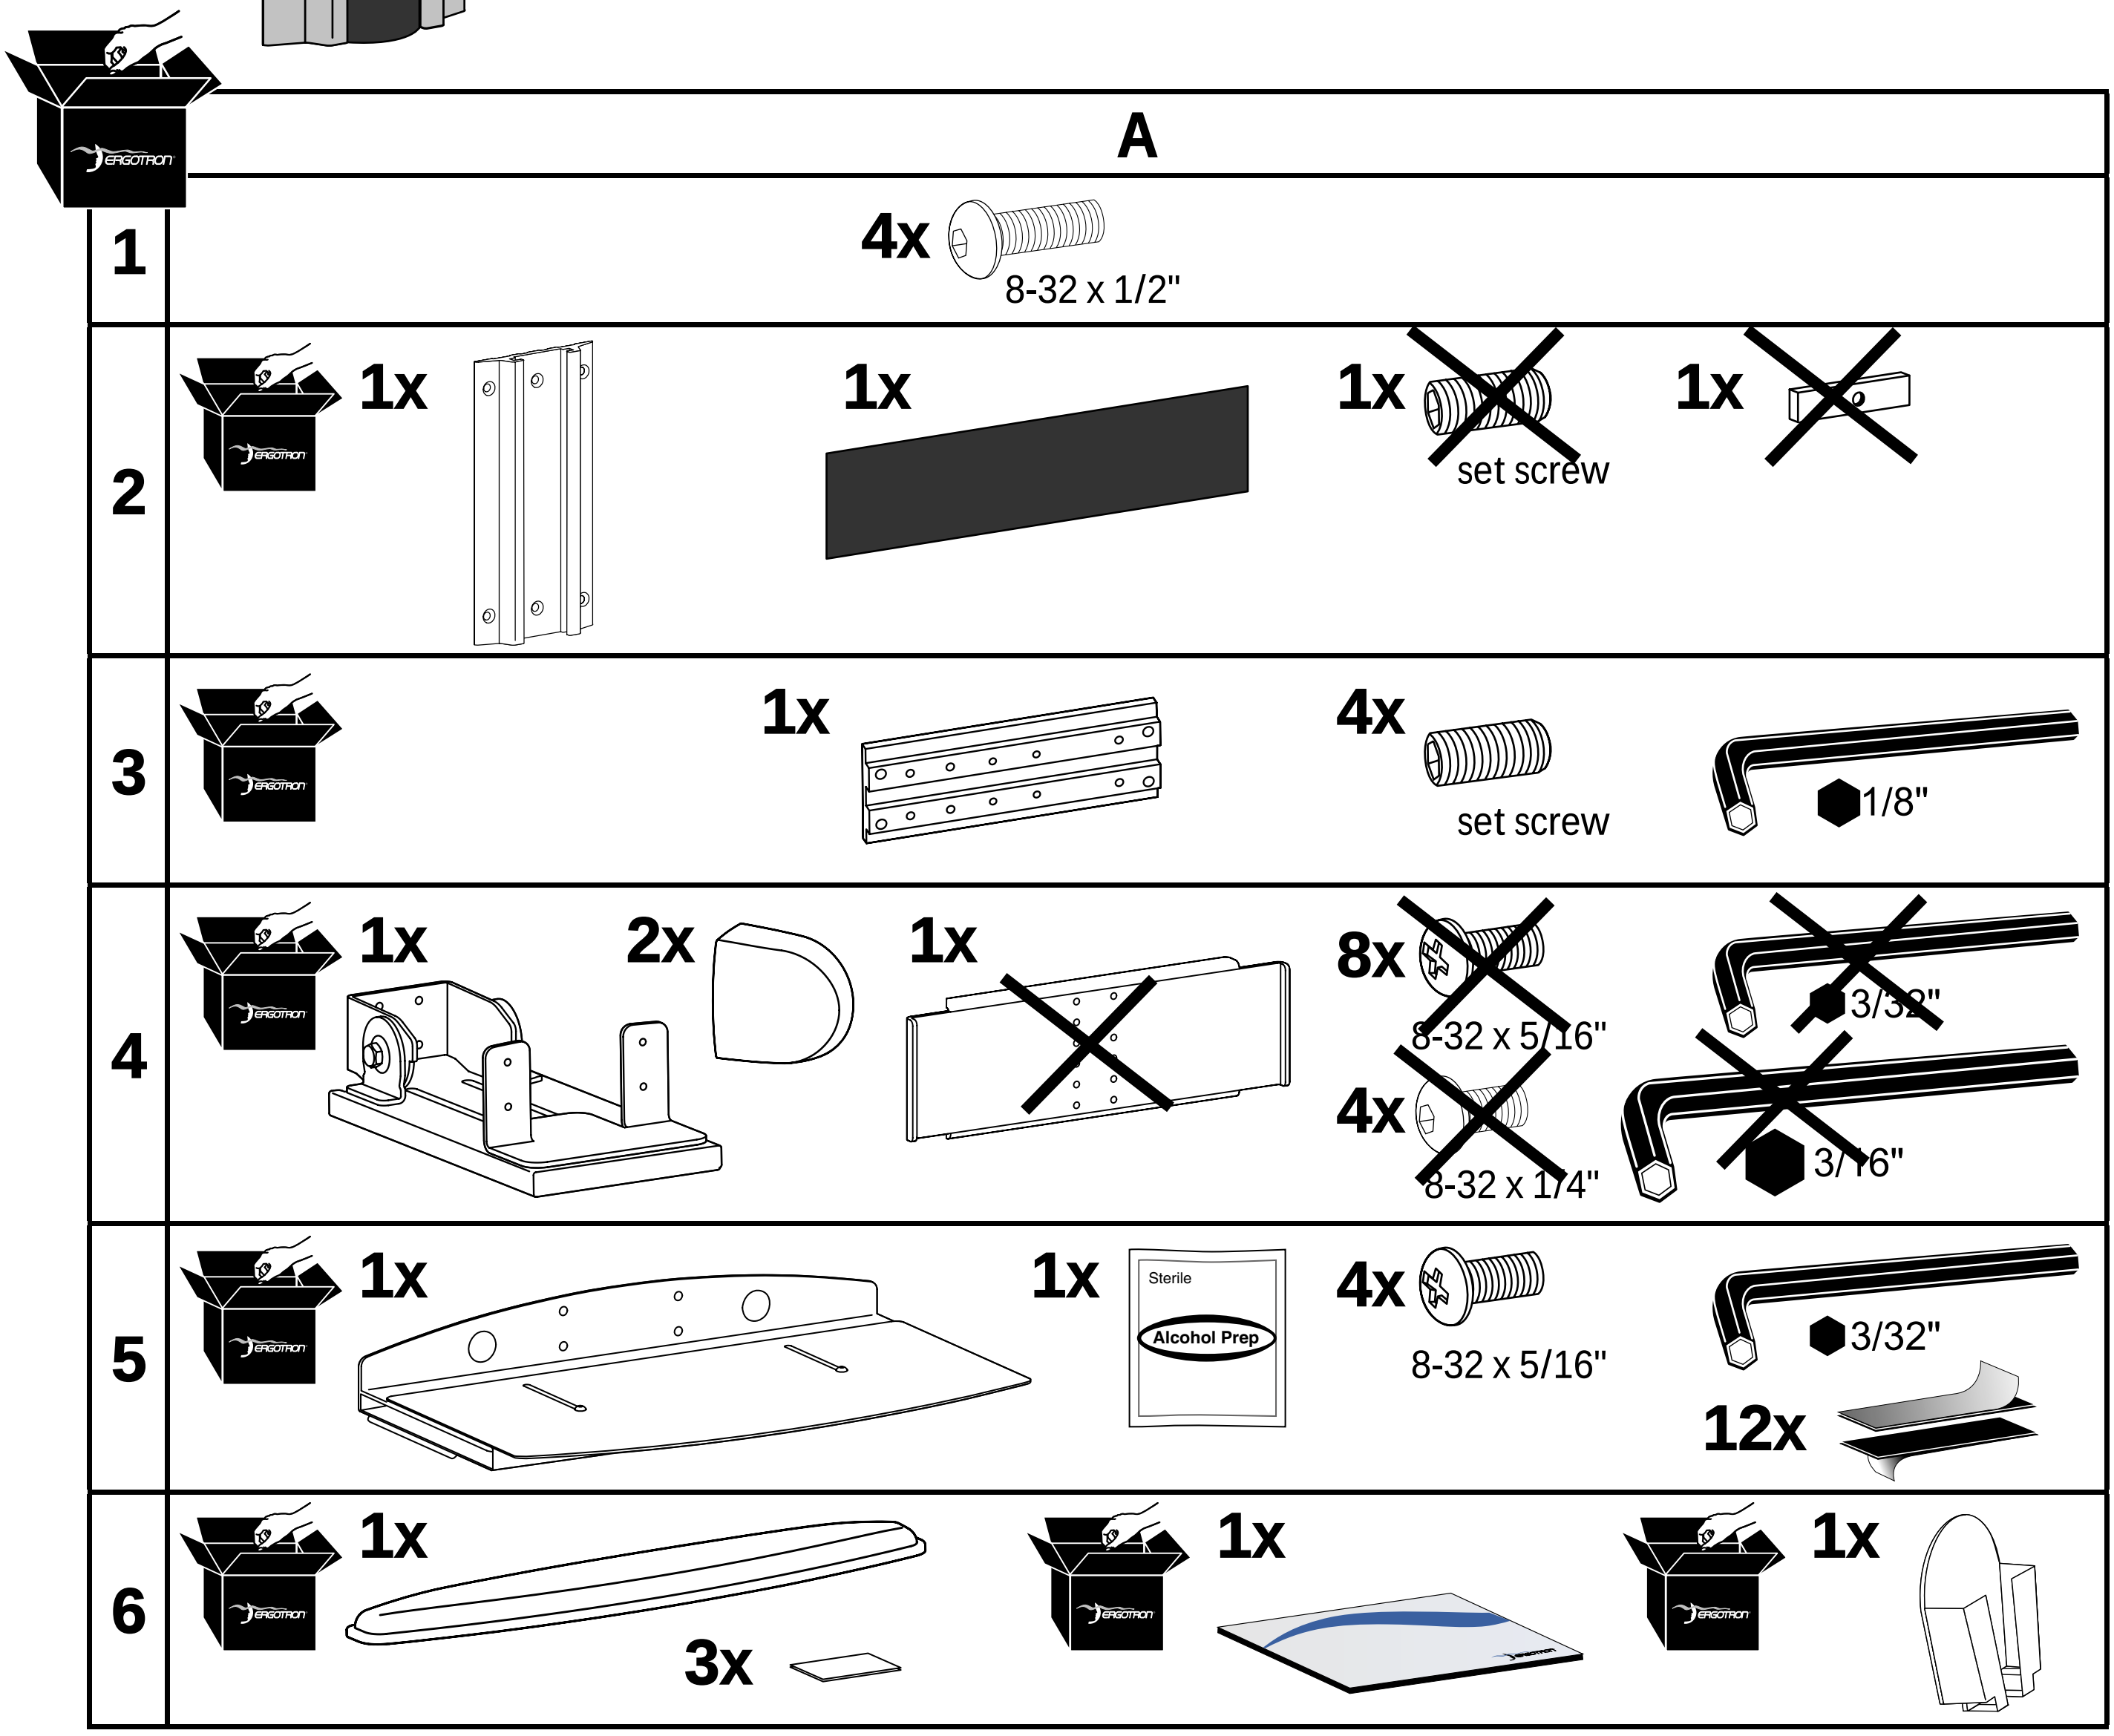


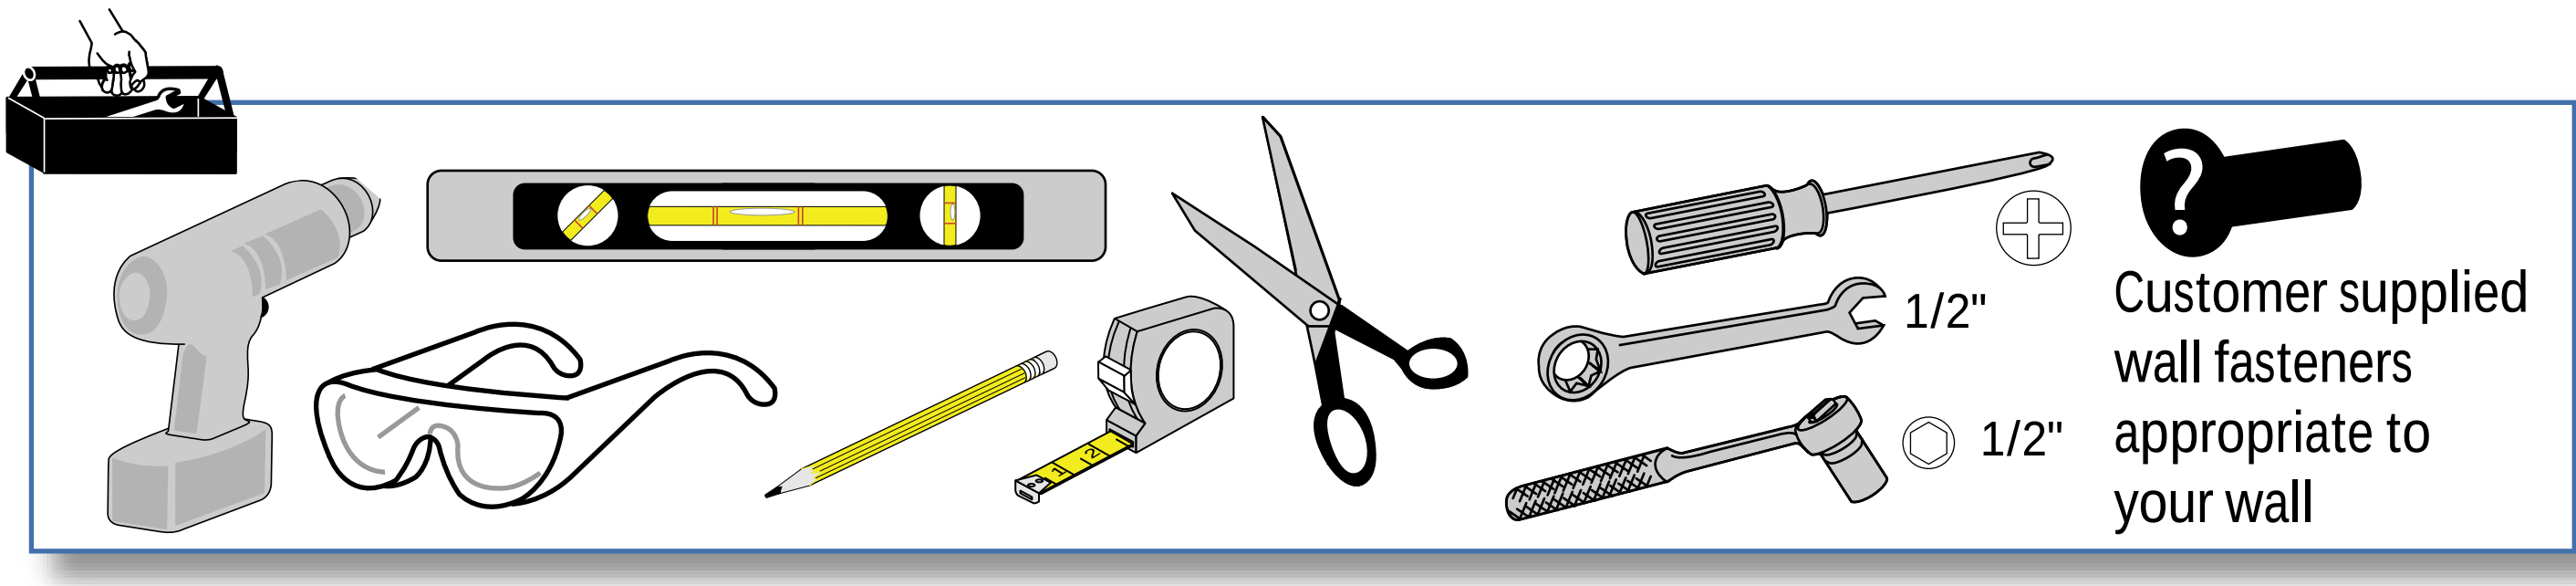

1 Determine Ergonomic Mounting Height

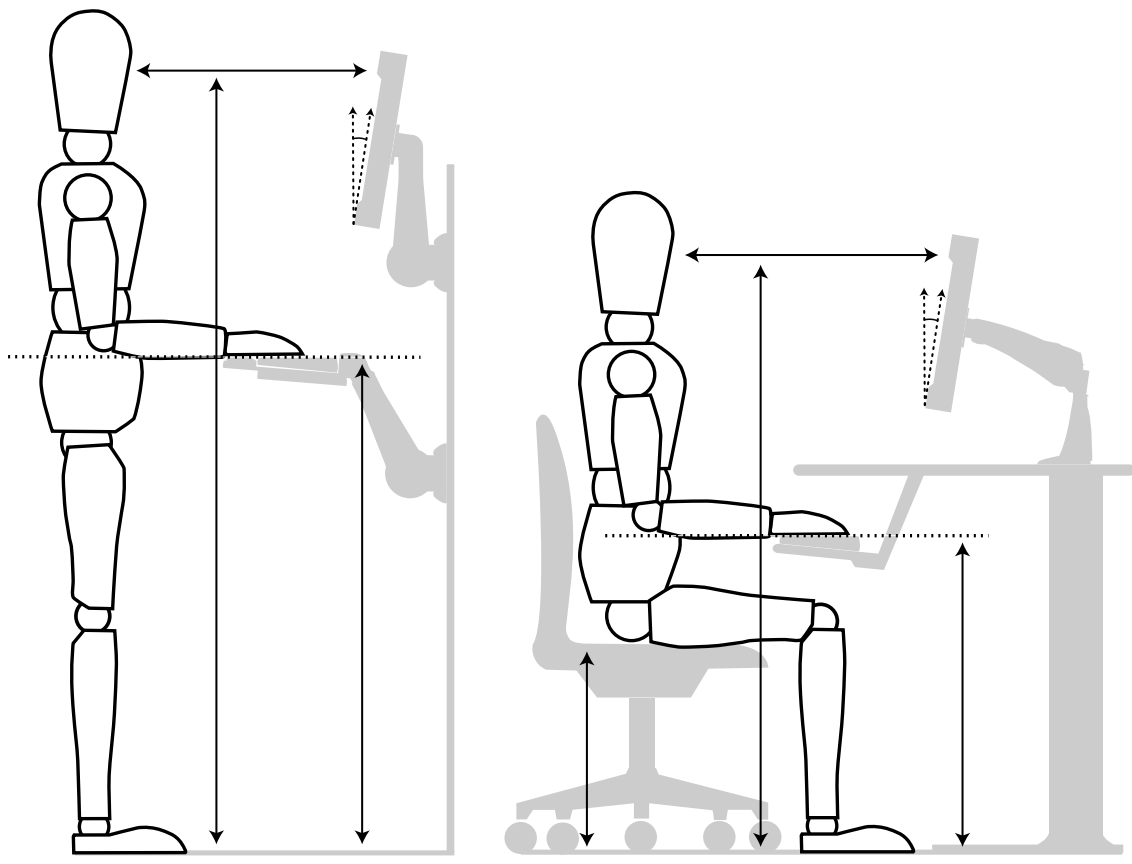


2 Attach to Wall



Ergotron hardware kit or customer supplied wall fasteners appropriate to your wall

Use the appropriate Ergotron hardware kit (sold seperately) or your own hardware to mount the Track to the wall. You may use all or some of the mounting holes depending on your application - see WARNING below.


⚠ **WARNING:**
Ensure that the wall structure is capable of supporting four times the total weight of mounted equipment. Mounting to wall surfaces that do not meet this criteria may result in an unstable, unsafe condition which could lead to personal injury and/or property damage. Consult a construction professional if you have any doubt about what this means in regard to your particular application.

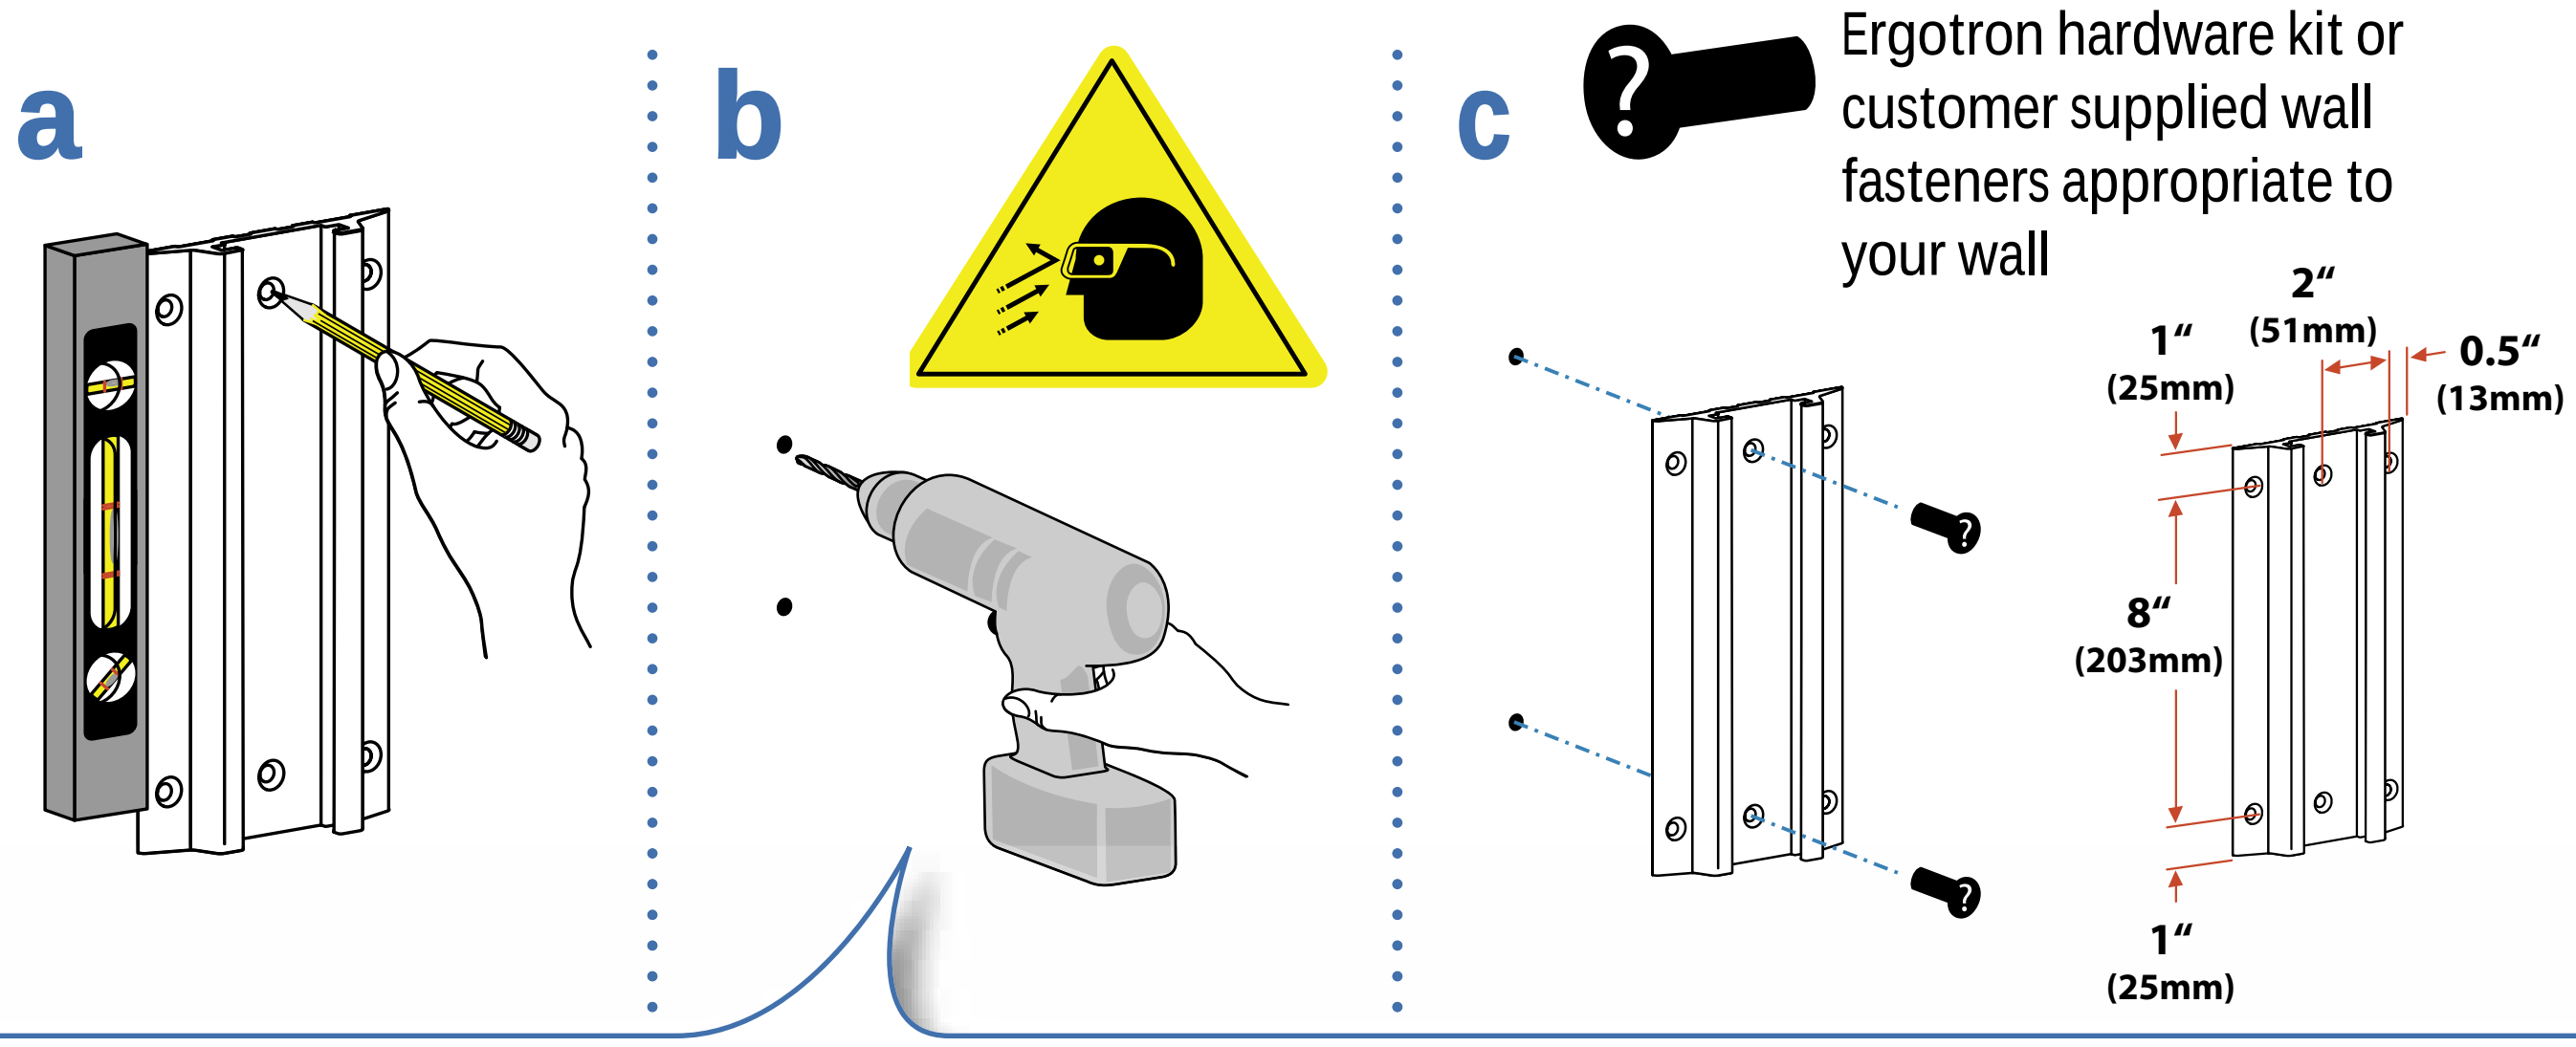

b Wall Anchor Hardware (sold separately)


If, after consulting with appropriate local engineering, architectural, or construction personnel it is determined that wall anchor hardware should be used, refer to the following instructions.

1. **Use a 1/2" (13mm) drill bit to drill holes.**
2. **Push anchor plate into hole.**
3. **Pull loop back so plate opens flat against inside surface of wall.**
4. **Push collar into hole.**
5. **Snap off loop.**

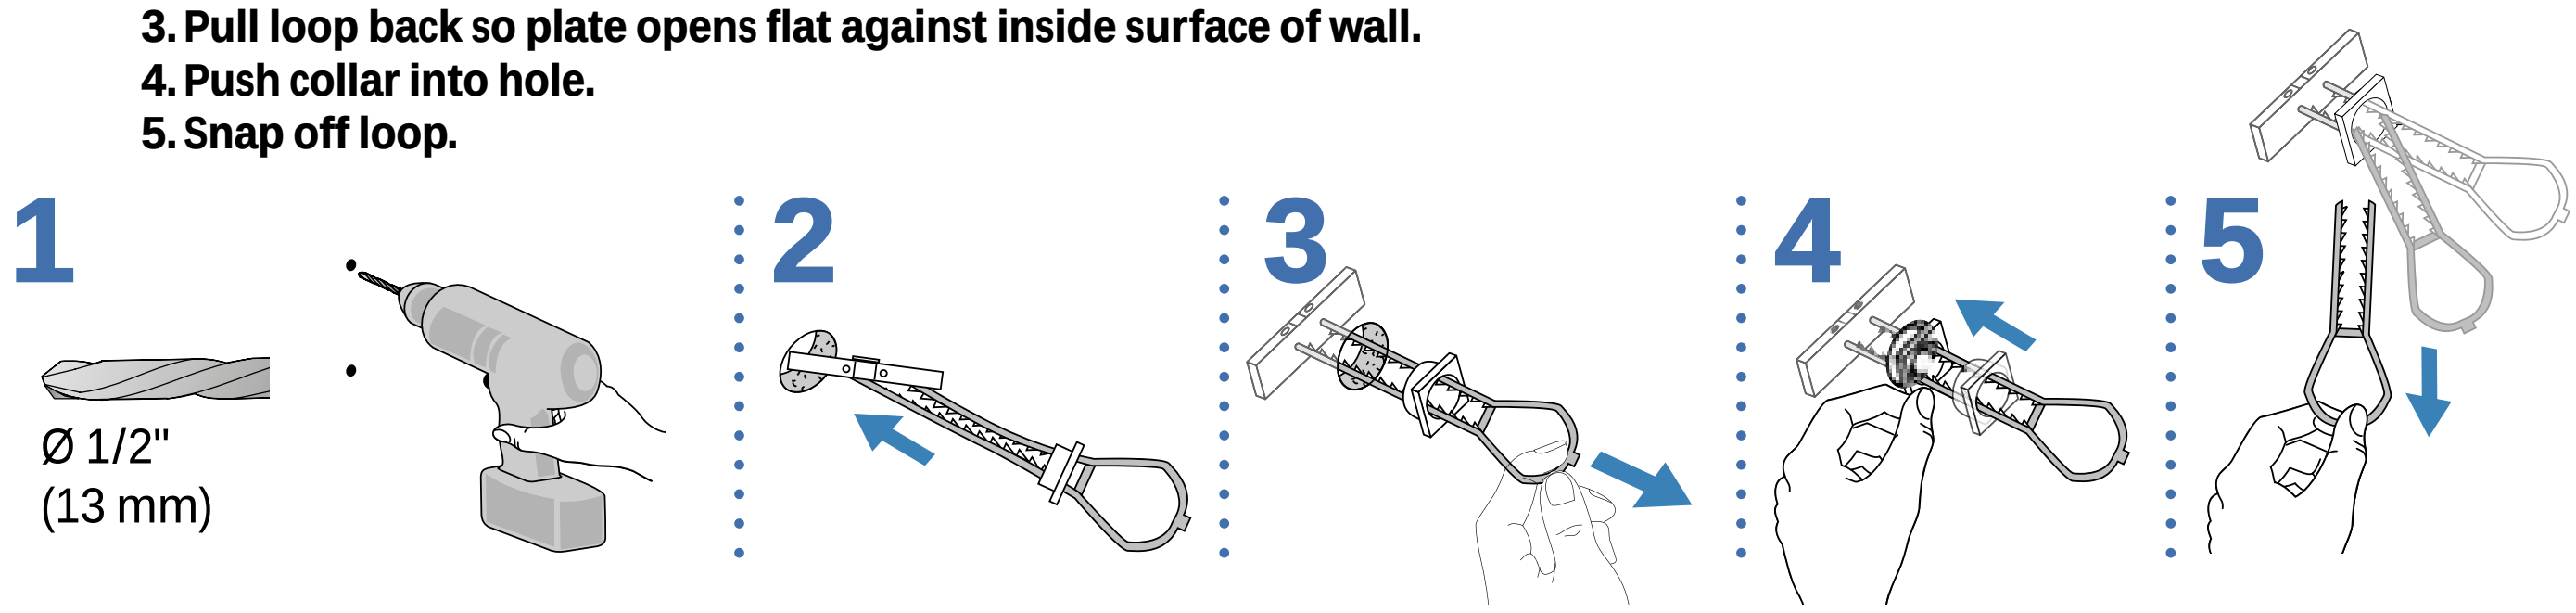


3 Attach Keyboard Tray


a

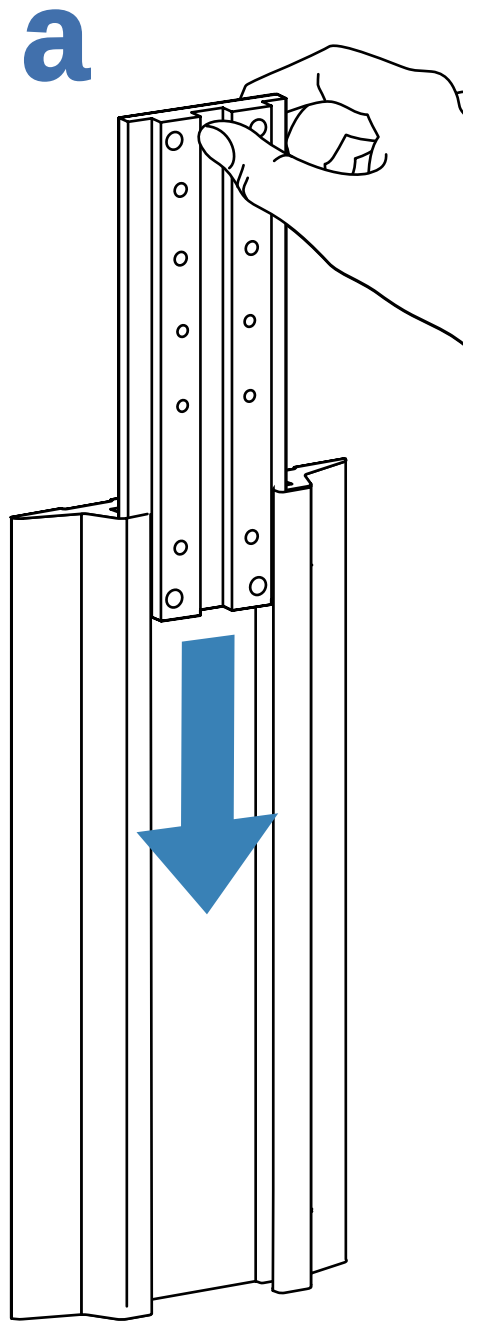


b

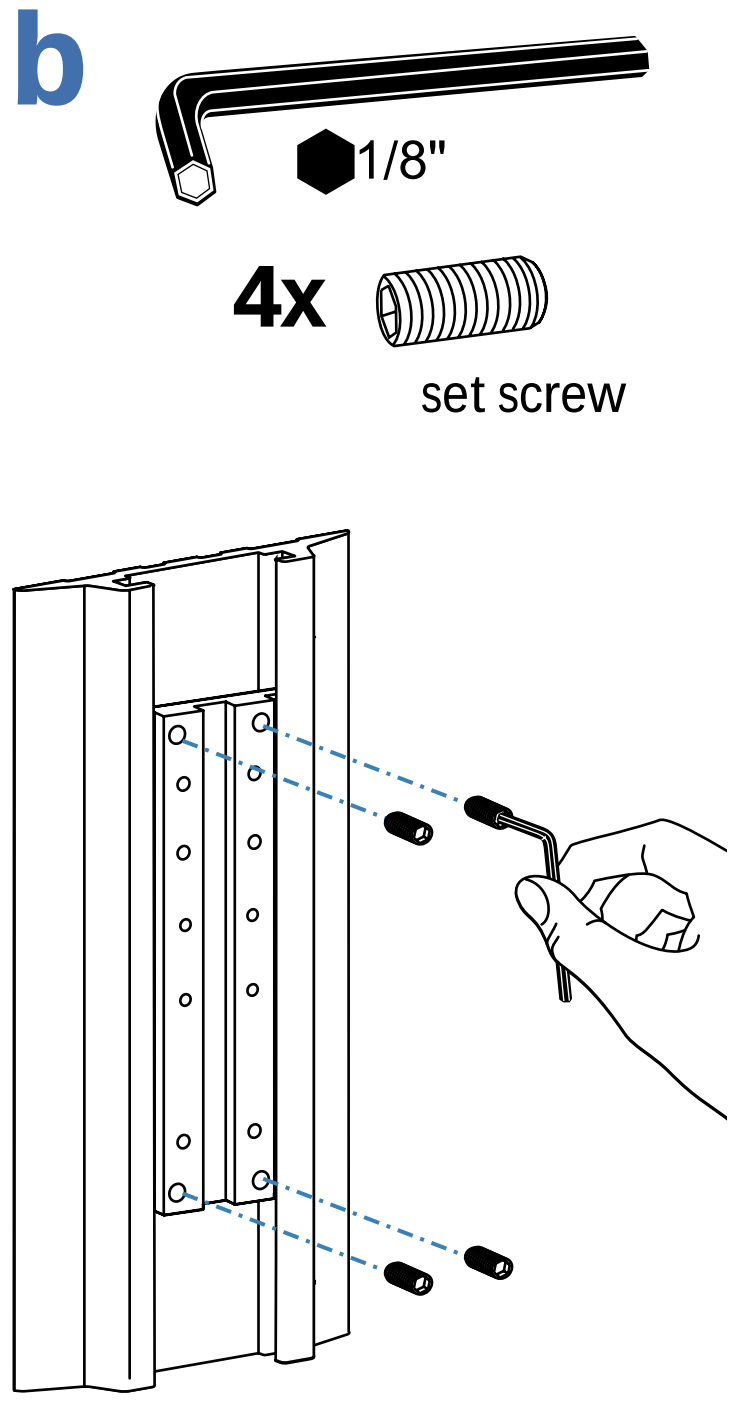

c

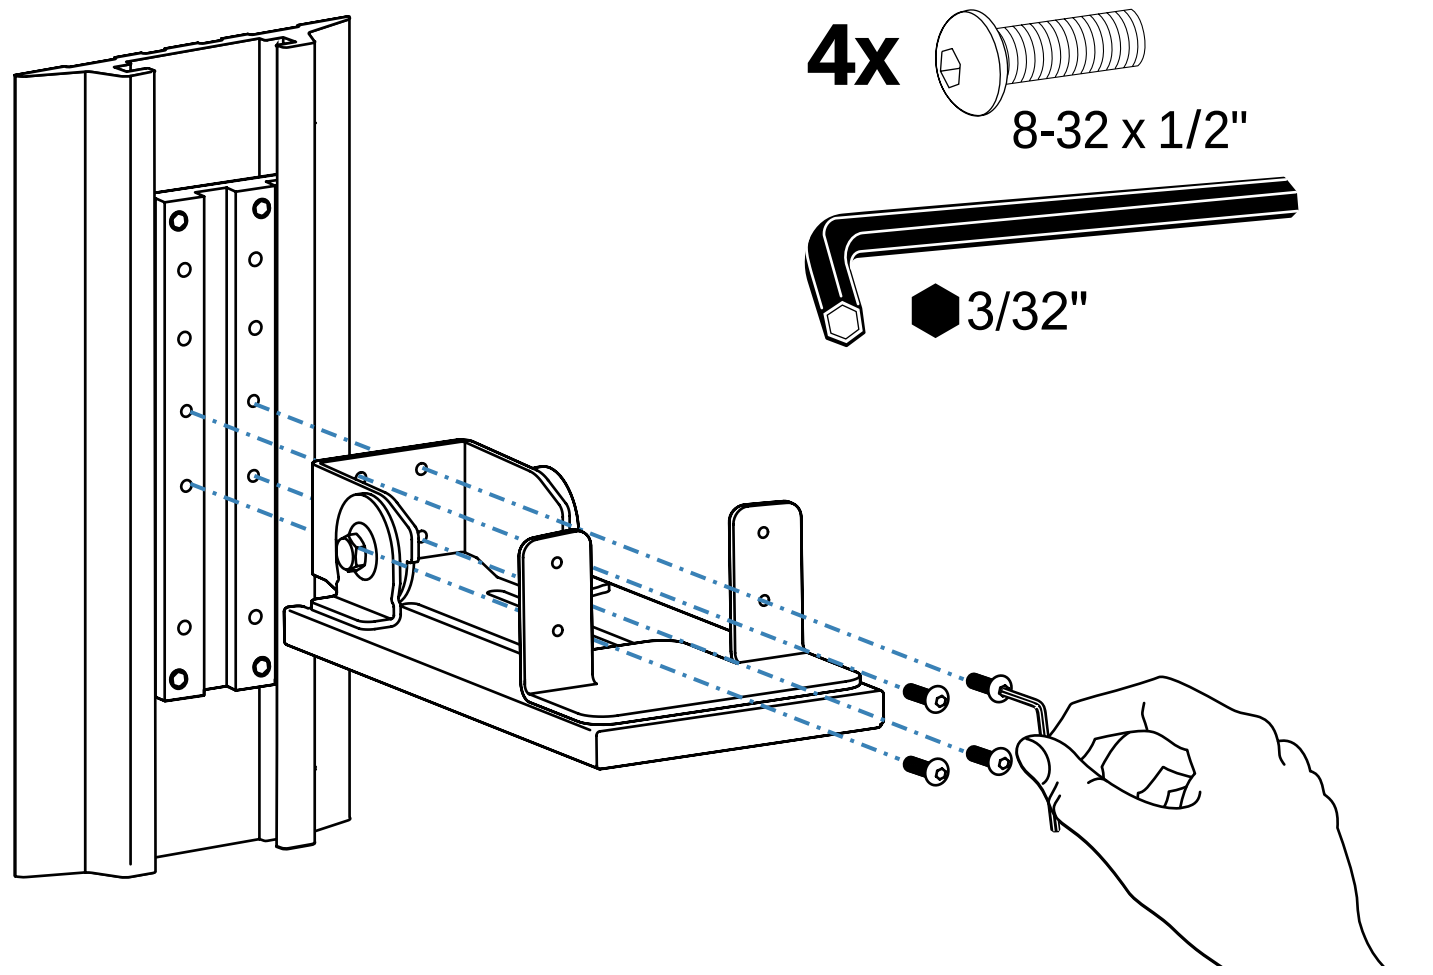


d

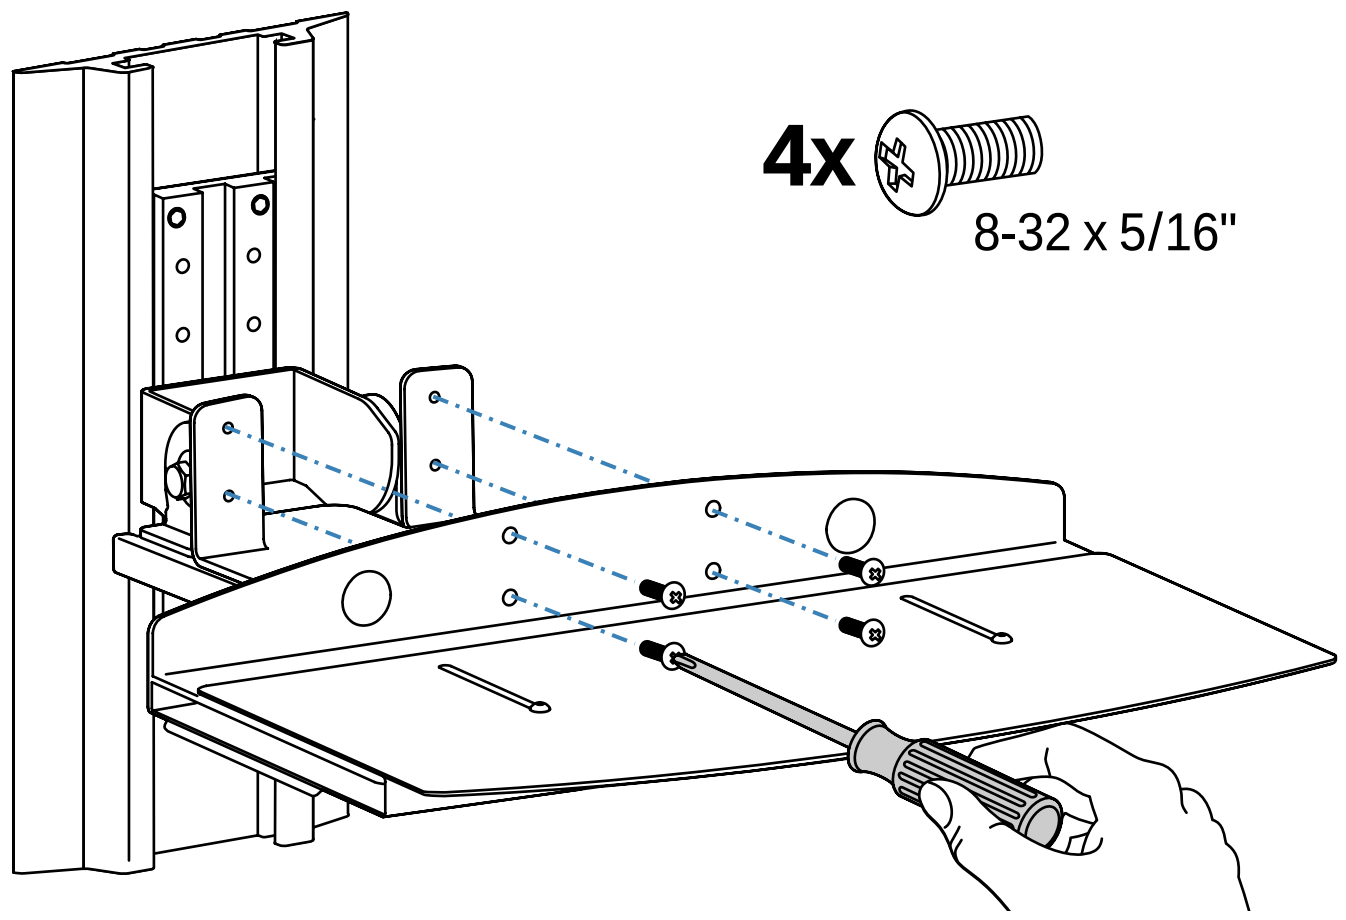


4 Attach Keyboard


a

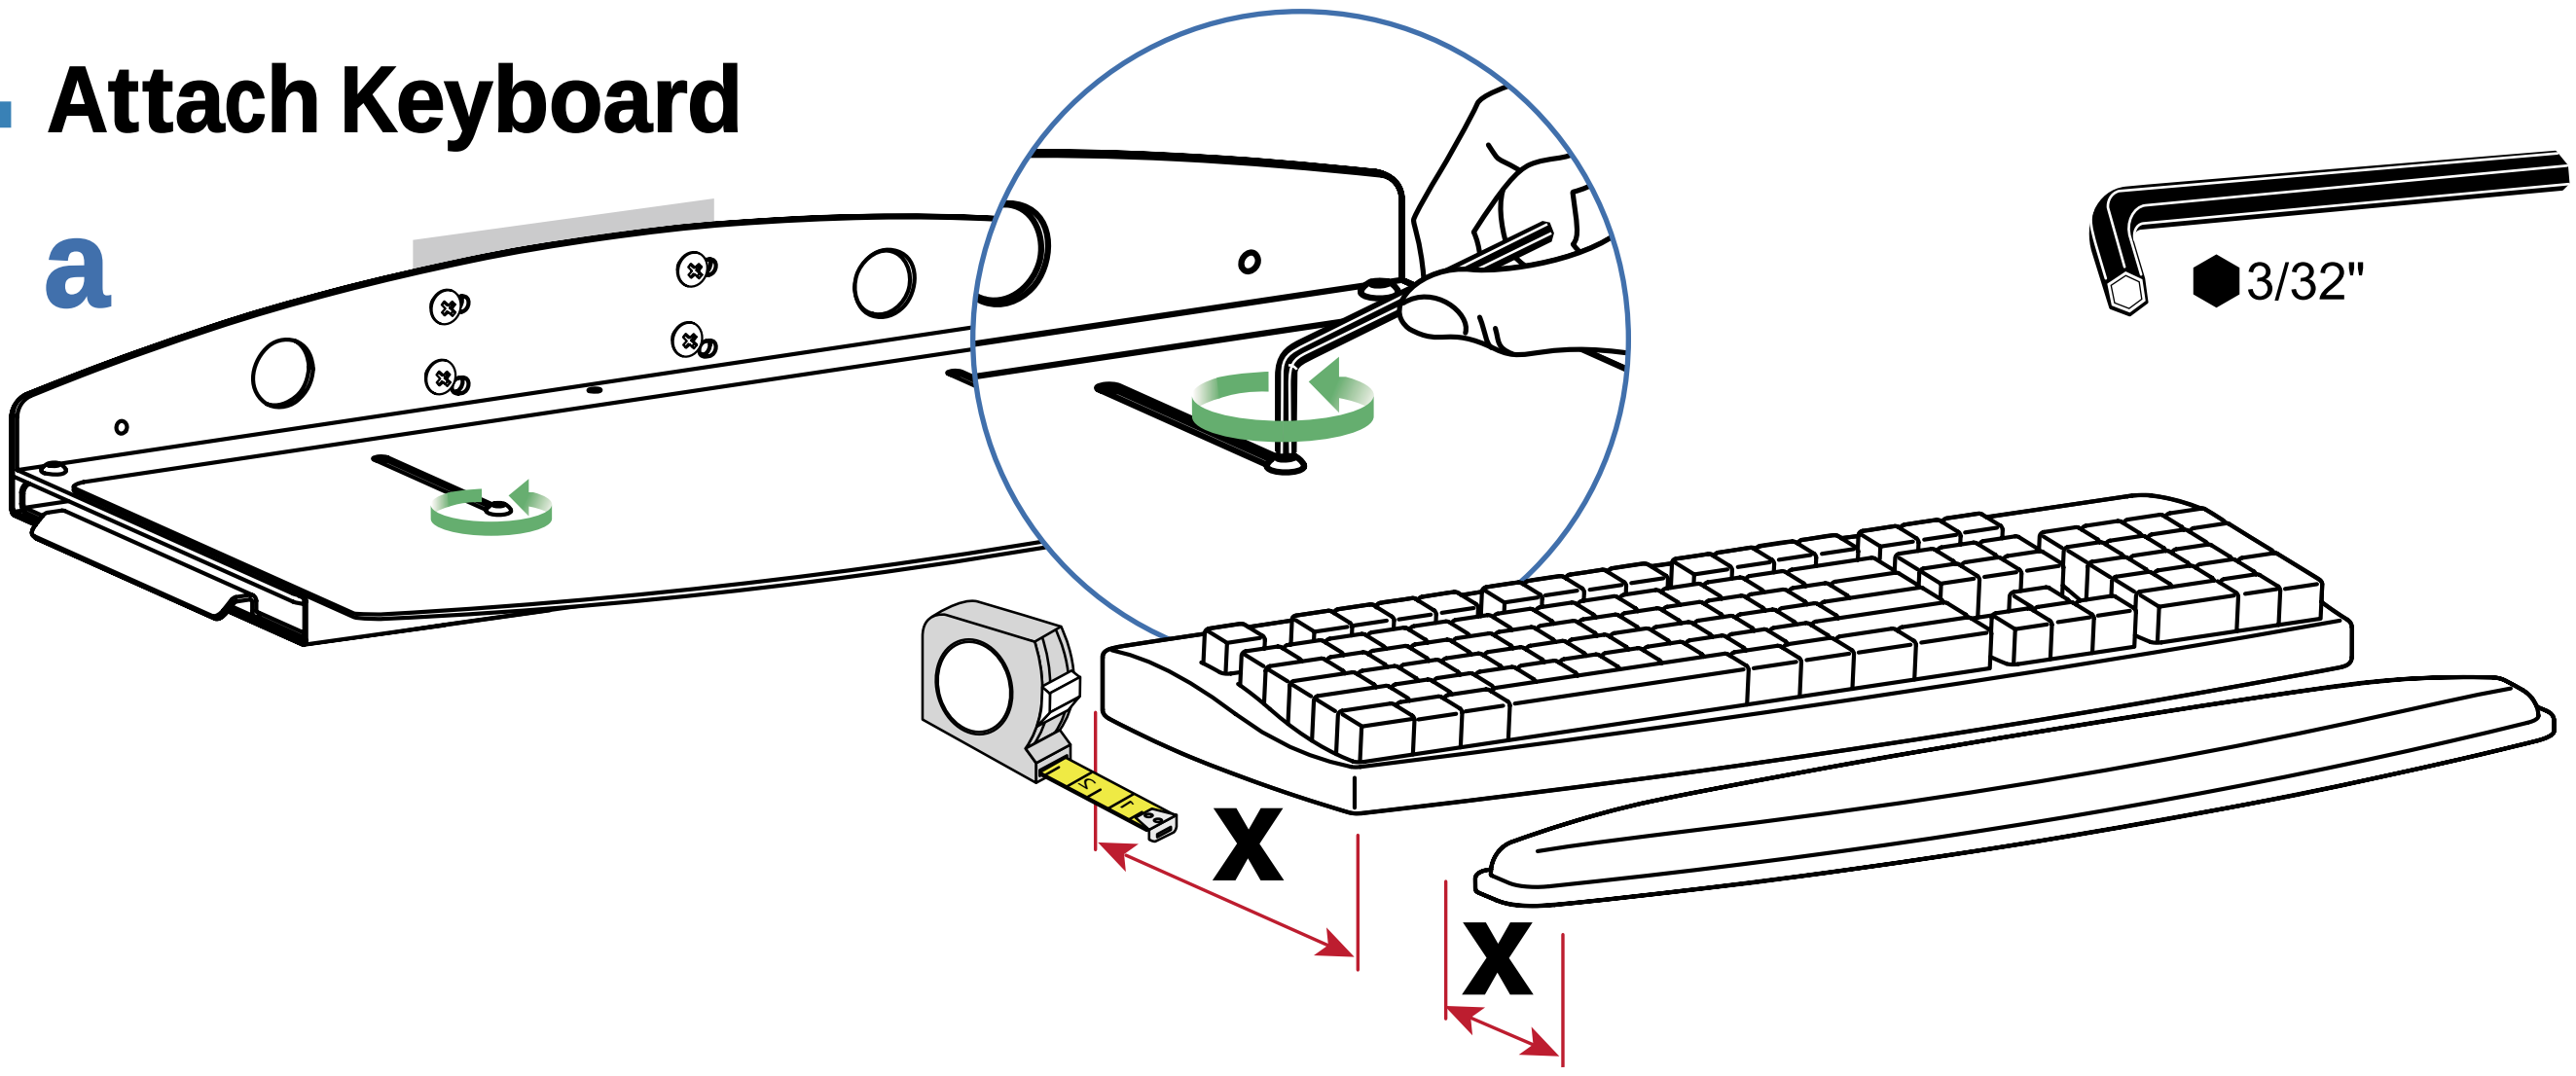


b

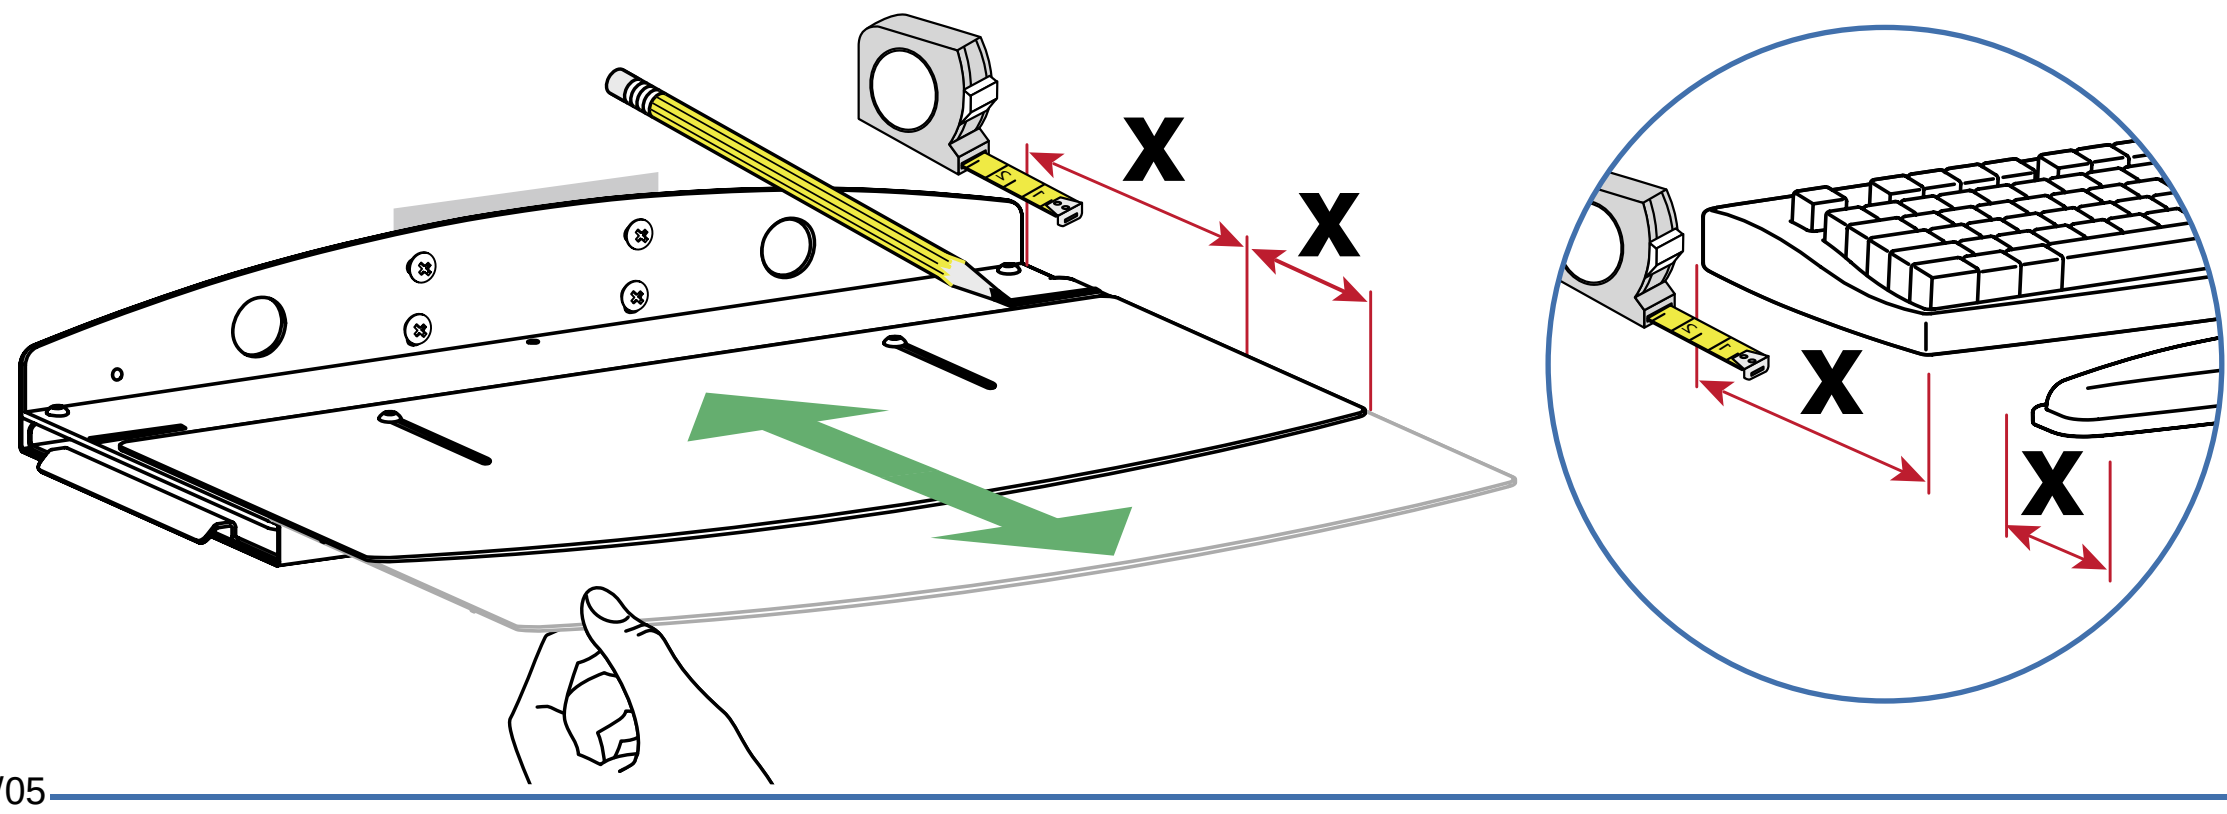


c

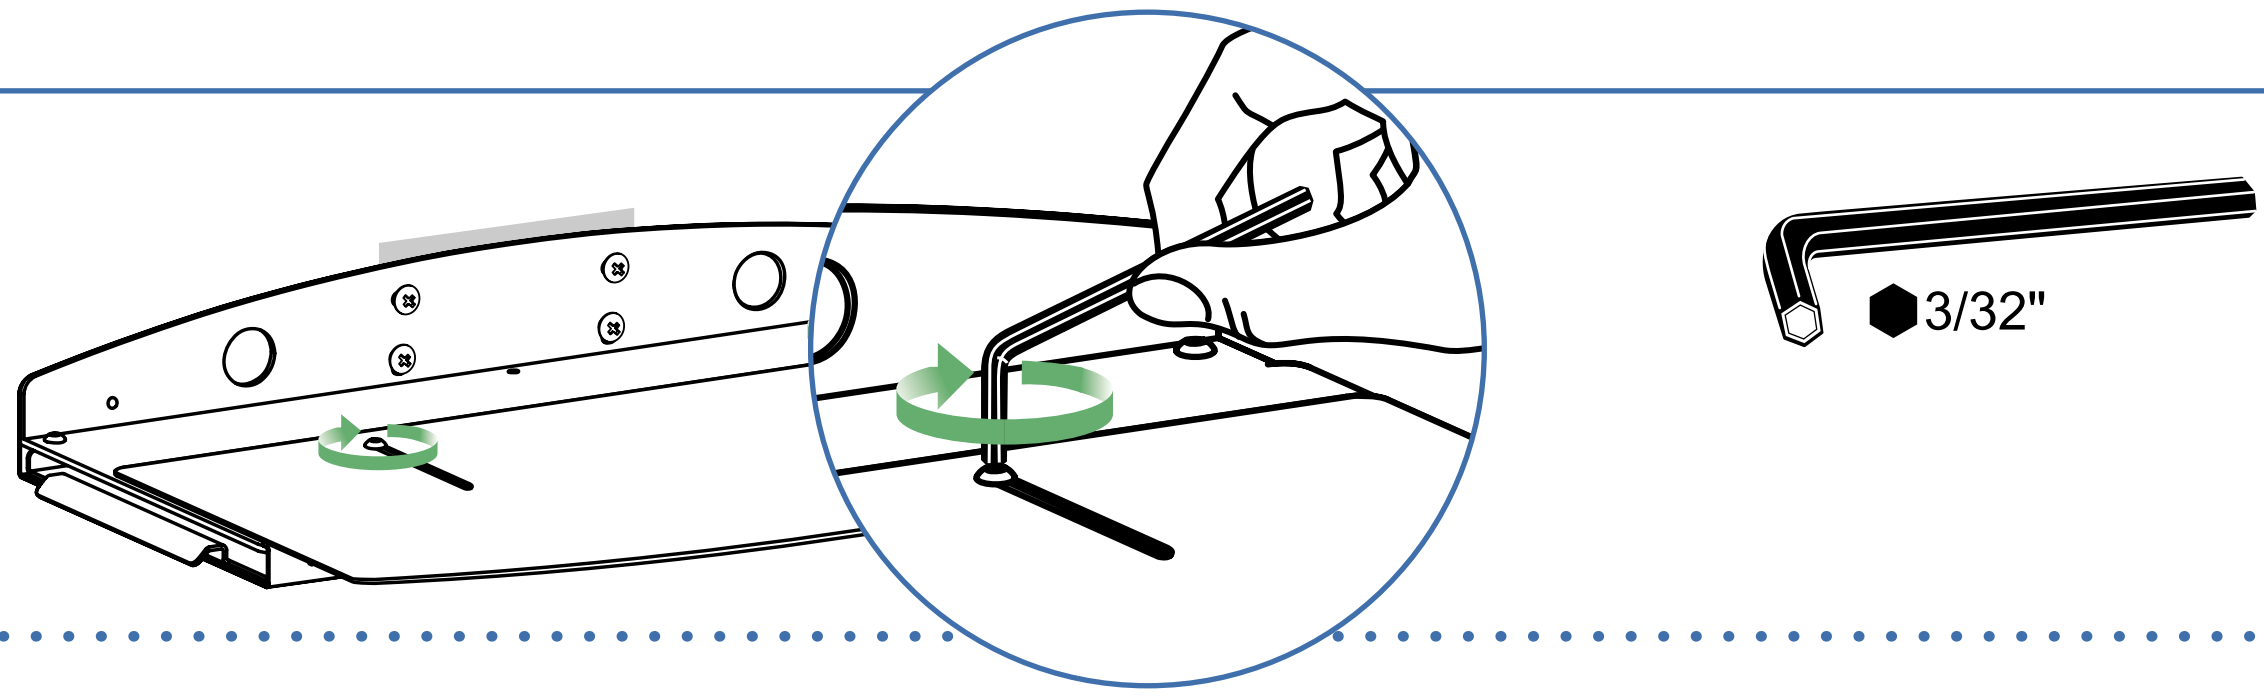


d

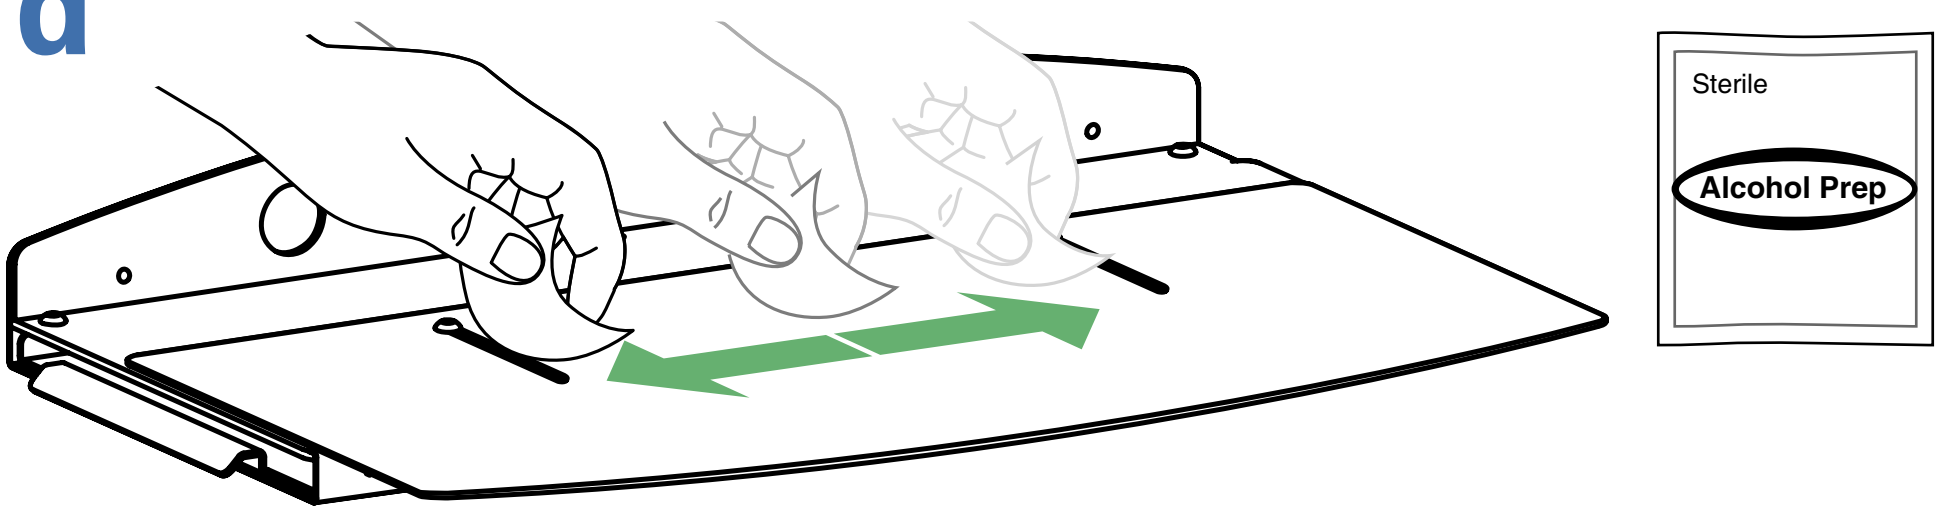


e

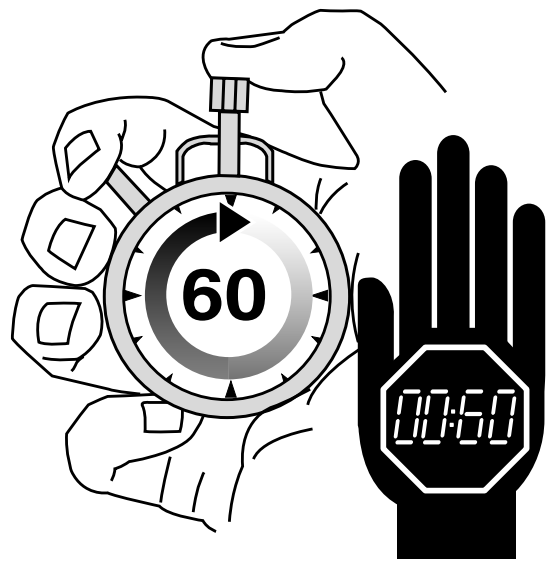


f

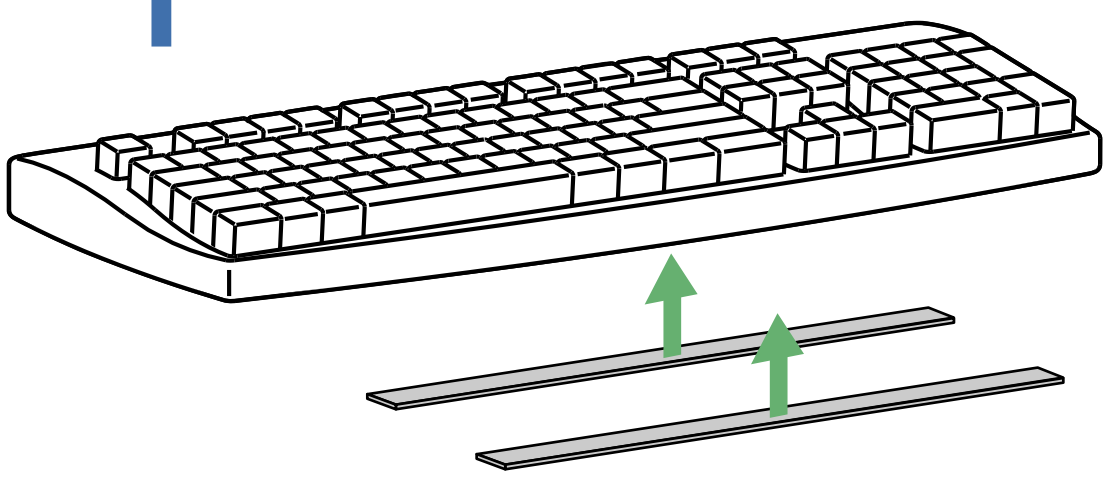


g

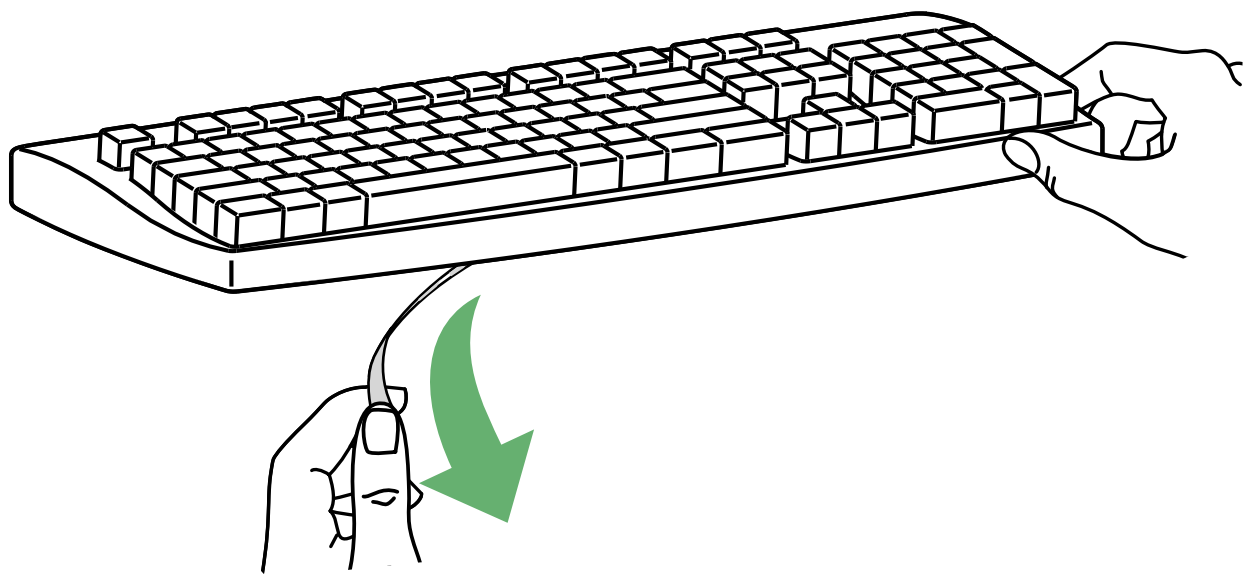

h

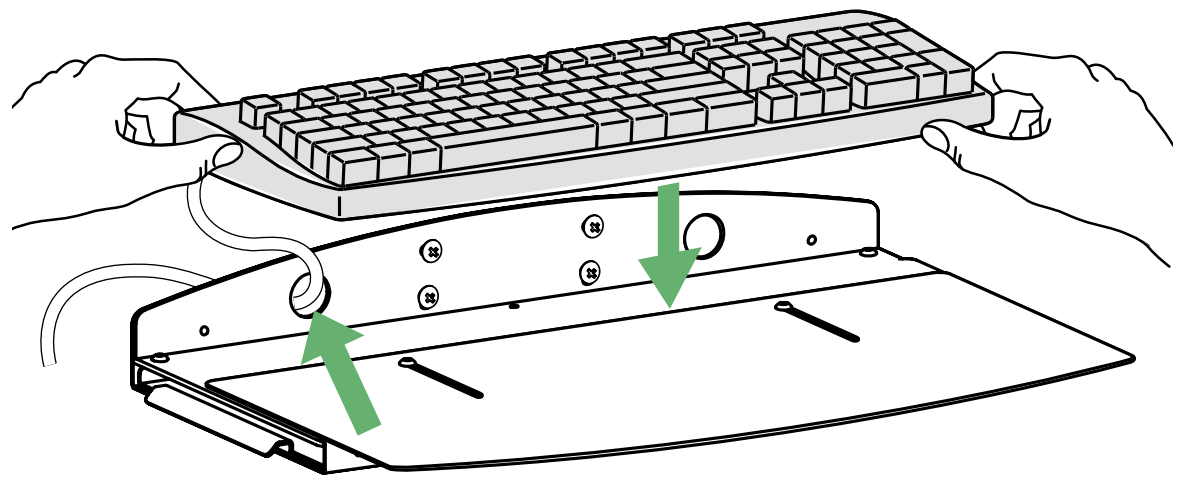


i

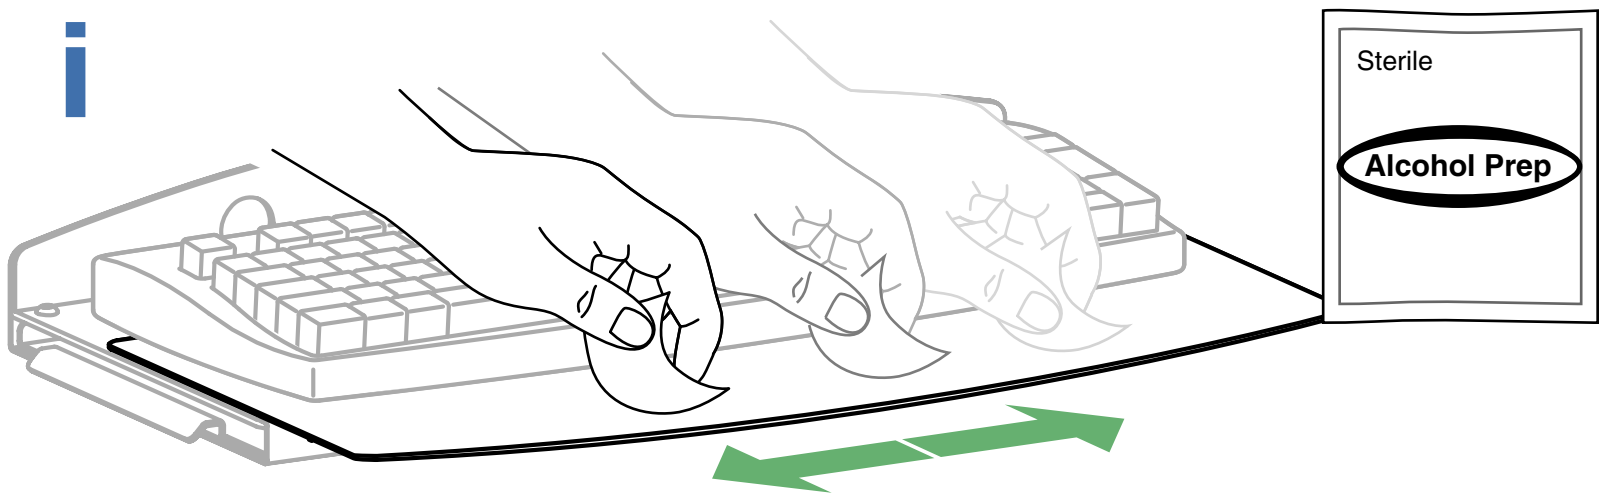


j




k

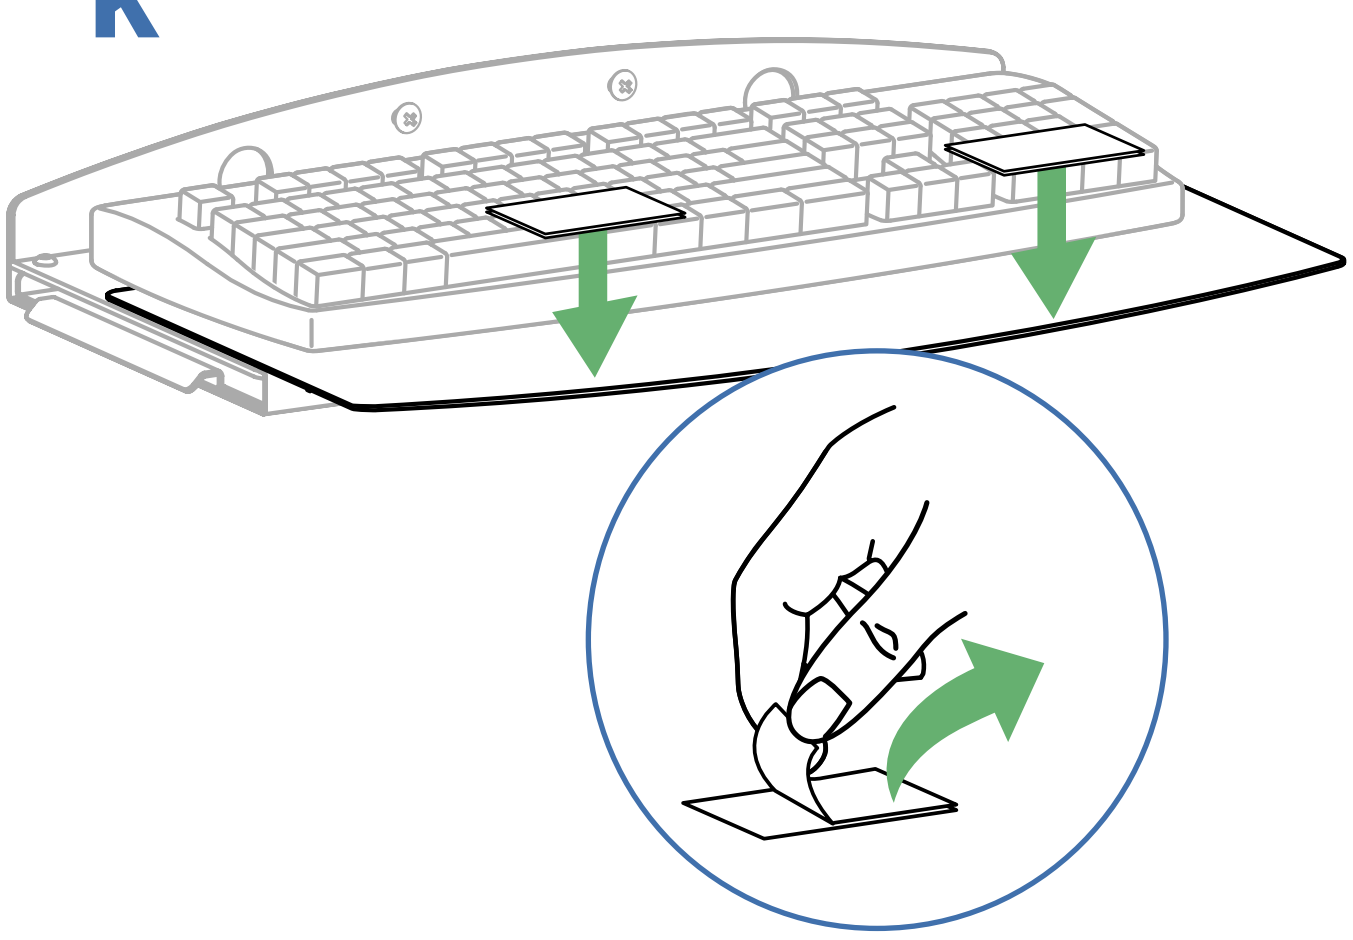

l

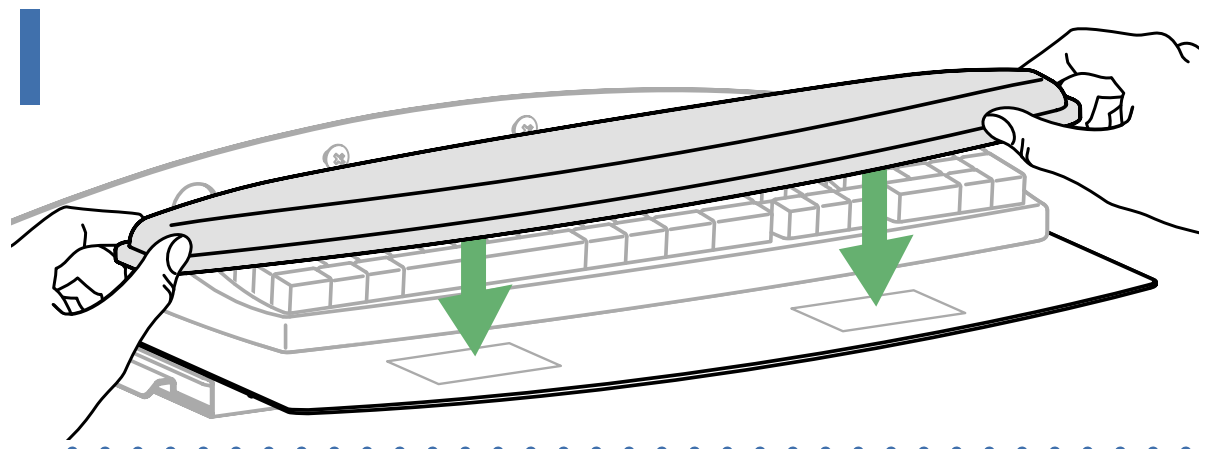


m

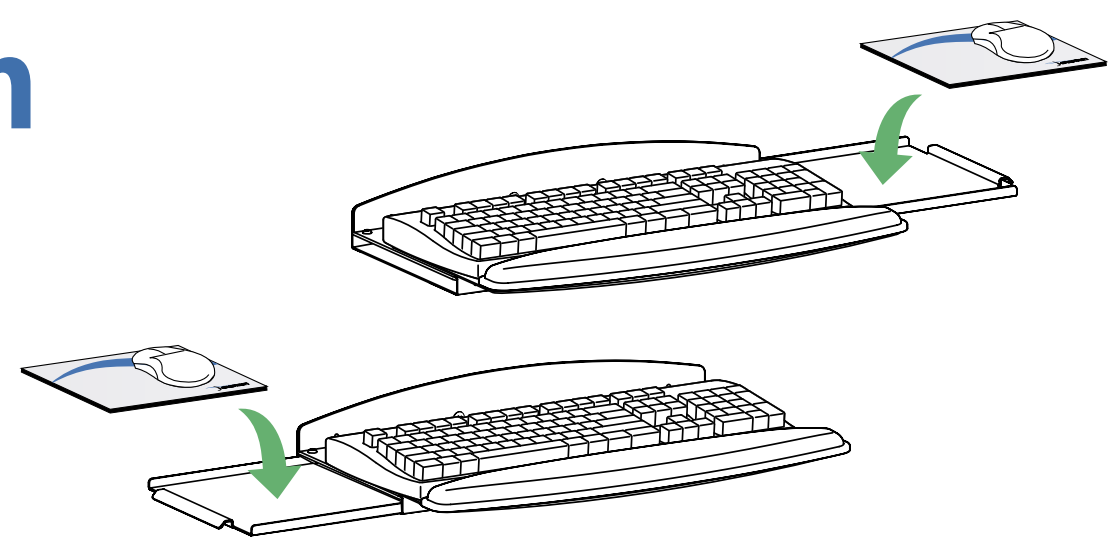

5 Range of Motion


This product is designed to adjust quickly and easily according to your needs – refer to following steps for adjustment.

Tilt – Forward and Backward

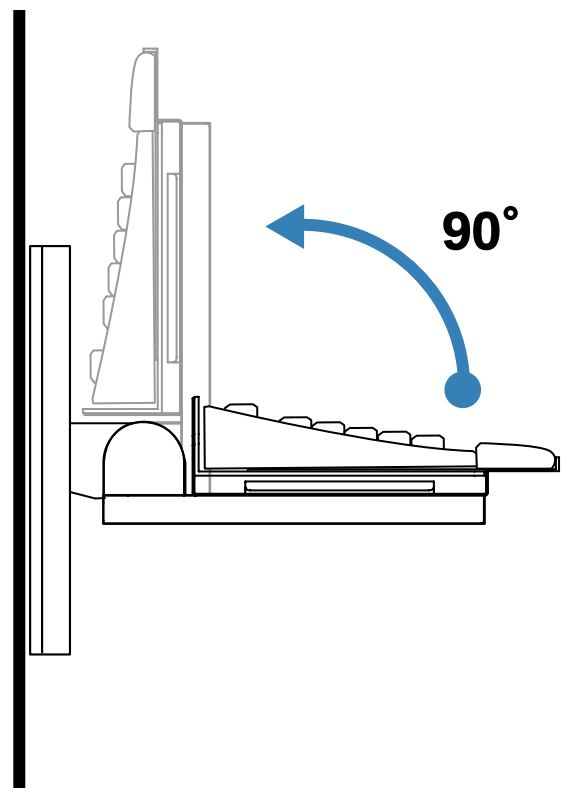


Adjust Tilt – Forward and Backward


If it does not stay in place or movement is stiff, tension needs adjustment. Adjust until motion is equal.

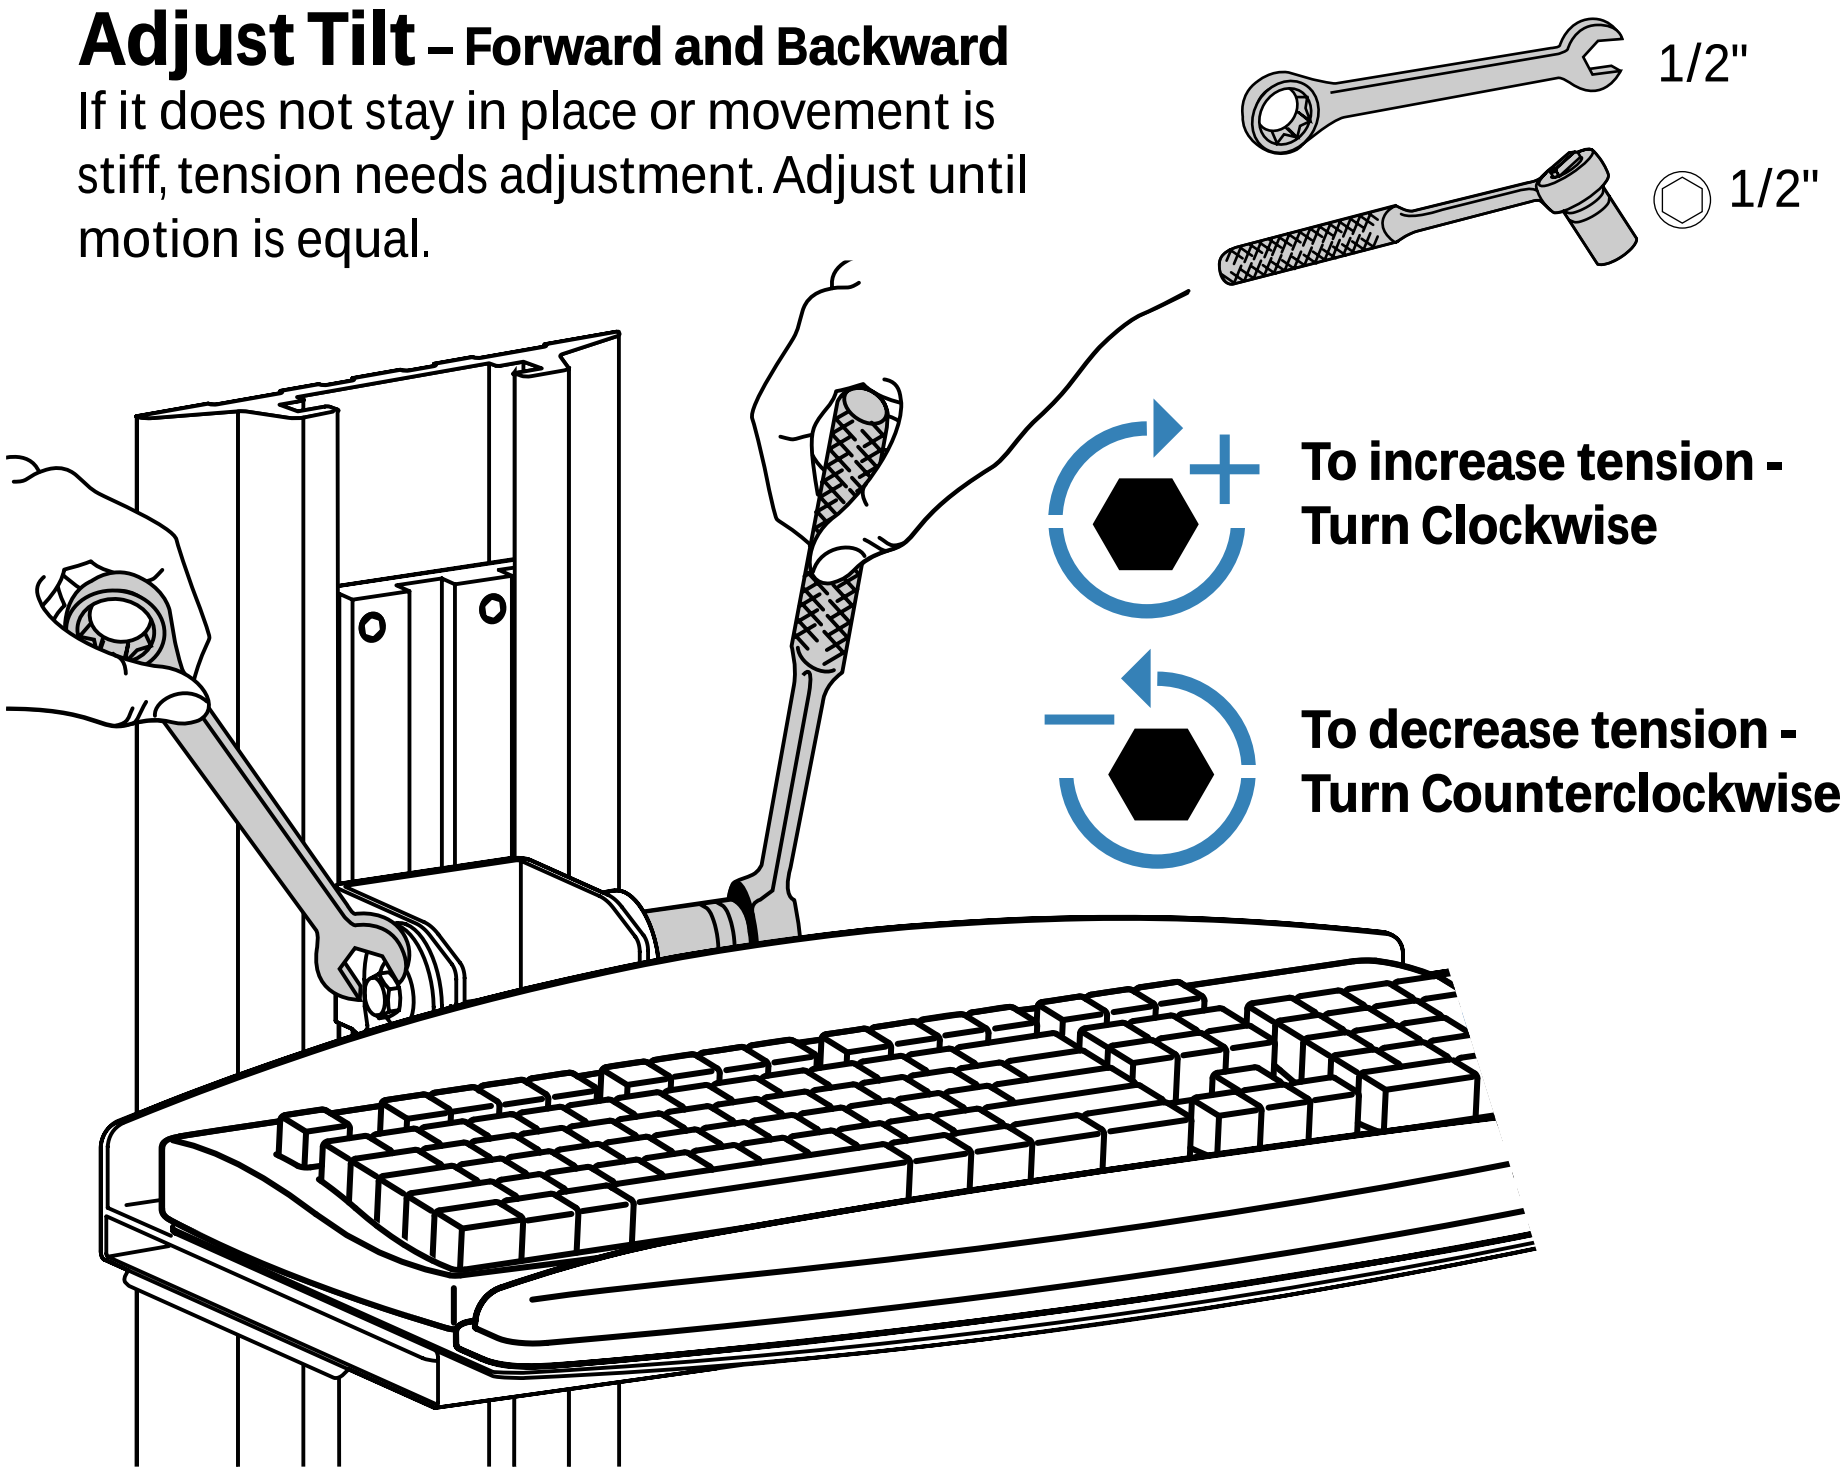


6 Attach Pivot Covers

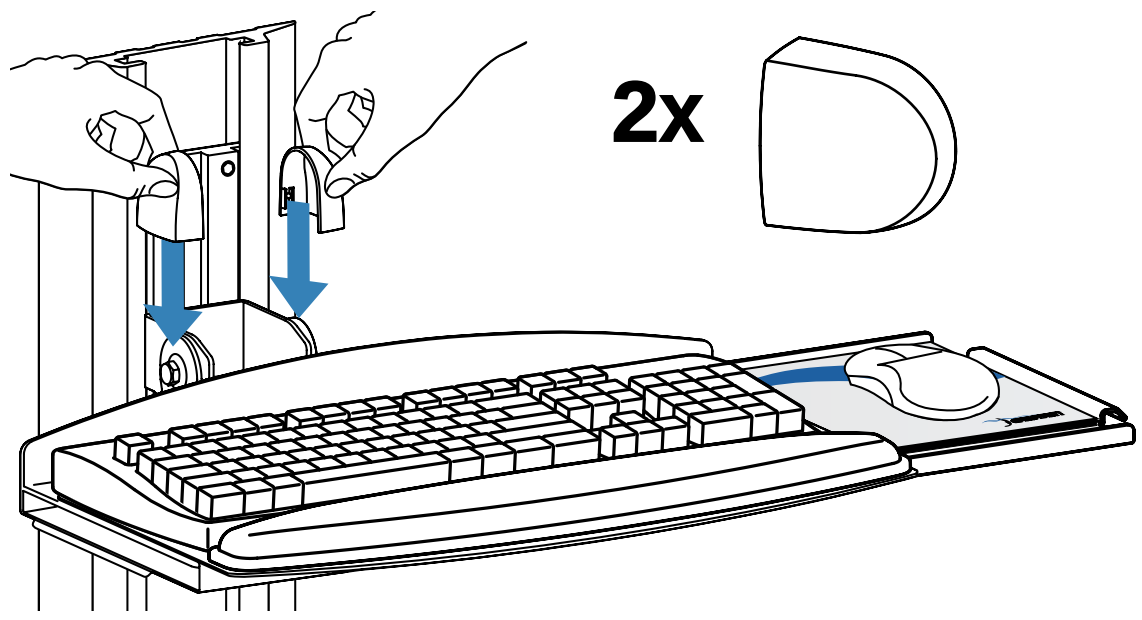

7 Attach Mouse Pouch

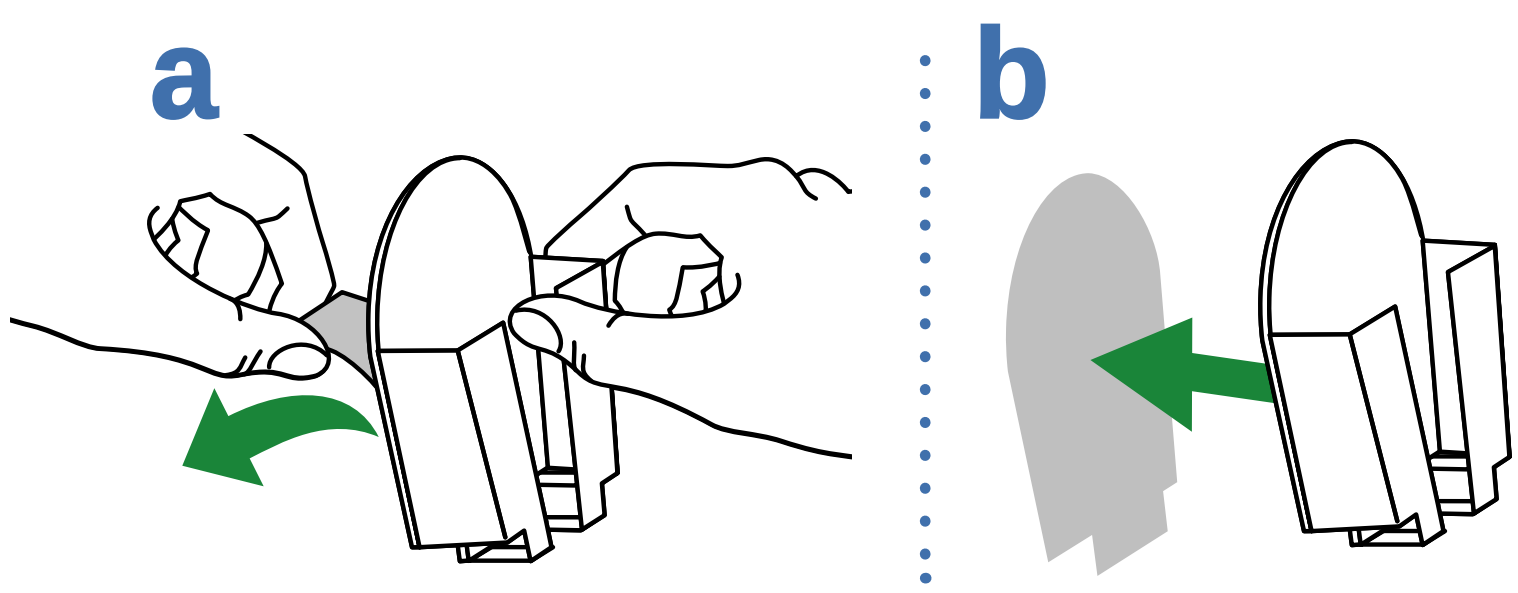

8 Attach Cable Management

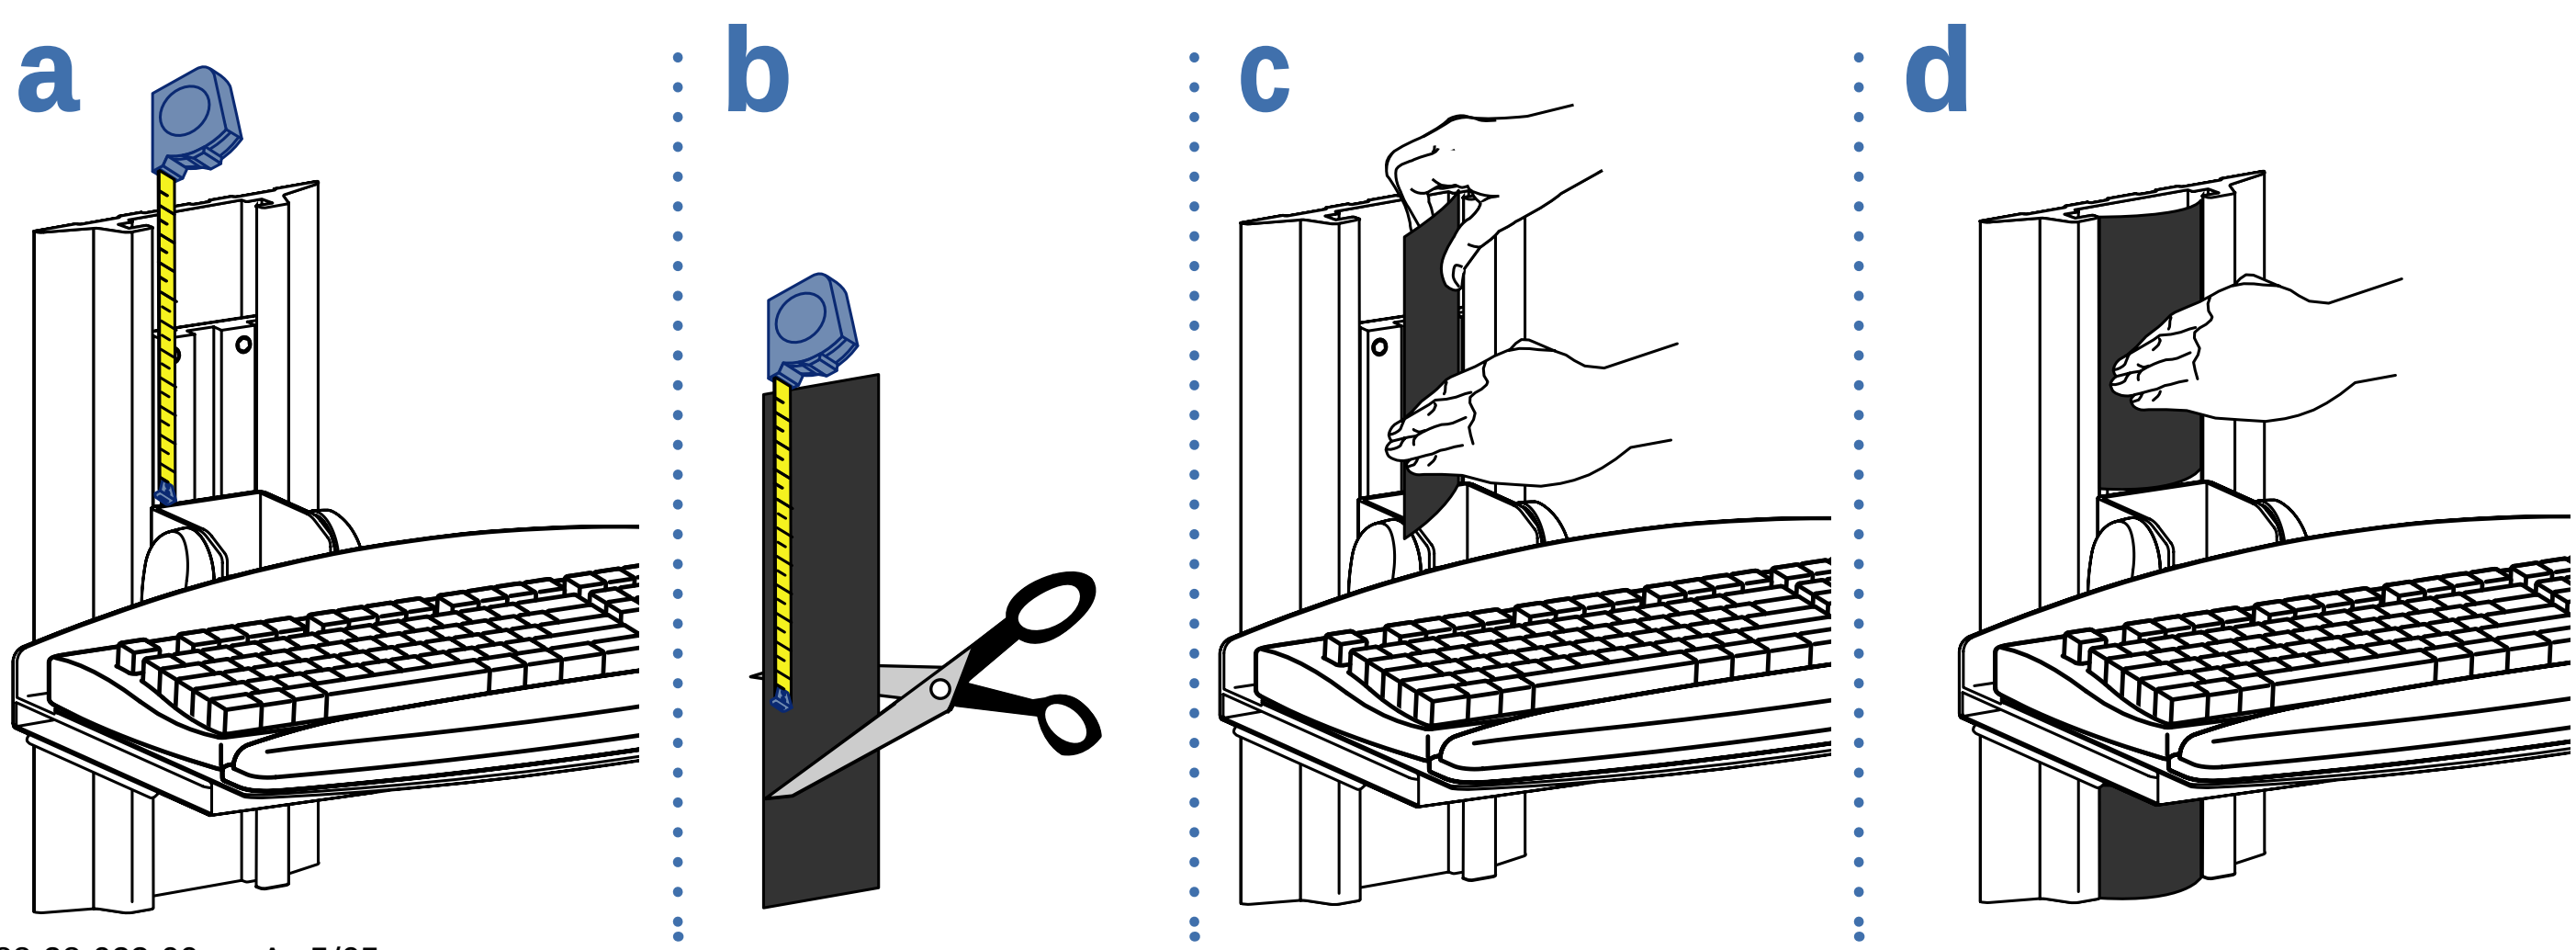

Ergotron Warranty

Ergotron warrants that its products will remain free of defects in material and workmanship for five (5) years. All subject to the exceptions, exclusions and limitations as set forth below.

Exceptions to this warranty include:

- Three (3) year warranty on all Neo-Flex™ by Ergotron products
- One (1) year warranty on all power supply components by Ergotron; battery carries a 90 day performance warranty and six (6) month warranty against manufacturer defects.
- OEM products resold by Ergotron are warranted by the respective manufacturer

Exclusive Remedy: If any Ergotron equipment is or becomes defective in material or workmanship during the warranty period, Ergotron, at its sole discretion, may replace or repair the unit at a designated Ergotron location or at the customer location. The purchaser must get pre-approved authorization to return product to Ergotron. The Purchaser must contact Ergotron to obtain an RMA (Return Material Authorization) number. Ergotron will promptly repair or replace the item and ship it to Purchaser at no charge to the Purchaser. Performance of repair or replacement does not renew or extend the warranty period.

THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF WARRRANTY AS TO THE EQUIPMENT, except in respect to the personal injury. Purchaser shall give Ergotron immediate written notice of any personal injury resulting from use of Ergotron equipment.

Exclusions and Limitations: Ergotron disclaims liability for injuries or losses caused by or associated with installation or use of its equipment in any manner other than in strict conformance with the instructions set forth in its installation manuals, supplemental assembly and installation instruction sheets, technical bulletins or product literature or by equipment that has been altered, damaged or misused.

Warranty on fully charge batteries left in an unused state for more than three (3) consecutive months is automatically void.

Warranty on fully discharged batteries left in an unused state for more than three (3) consecutive days is automatically void.

Purchaser has not relied upon and Ergotron disclaims any and all warranties other than the expressed warranty stated above, subject to the exclusions and limitations provided herein. Ergotron disclaims all other warranties, expressed or implied, including but not limited to the warranties of merchantability and fitness for a particular purpose.

Ergotron further disclaims liability to purchaser and all others for all consequential, incidental and special damages caused by or in connection with the products, their use or misuse, and their performance or nonperformance.

821-842-00

For Warranty information in other languages contact customer service.

USA **1-800-888-8458**
Europe **+31 (0)33-45 45 600**

Ergotron, Inc.
World Headquarters
1181 Trapp Road, St. Paul, MN 55121 USA
Phone: 1-800-888-8458
Fax: 651-681-7717;
E-mail: sales@ergotron.com
Visit our website: www.ergotron.com

Ergotron Europe
Beeldschermweg 3
3821 AH Amersfoort
The Netherlands
Tel: +31 (0)33-45 45 600
Fax: +31 (0)33-45 45 649
Visit our website: www.ergotron-europe.com

Ergotron Canada
2000 Argentia Road Plaza IV, Suite 290
Mississauga, Ontario L5N 1W1, Canada
Phone: 1-800-267-9912
Fax: 1-905-567-4570;
E-mail: info.ca@ergotron.com